

W21S

Basic Manual

Contents

Before use

How to use
the phone

How to use
the phone book

How to use mail

How to use
the camera

How to use
EZweb

How to use
EZchannel

How to use
EZnaviwalk

How to use the
infrared data
exchange feature

Inputting text

Troubleshooting

Other features
Index

Welcome

Thank you for buying the W21S.

Before using your W21S, be sure to read the W21S Basic Manual (PDF manual) to ensure correct use of your W21S. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe place so you can retrieve them whenever you need them. If you lose any of these manuals, contact our service representative.

Printed manuals for W21S (Japanese)

The W21S comes with the Basic Manual and the Manual.

This Basic Manual and the Manual can be downloaded also from the au website.

au website: <http://www.au.kddi.com/>

W21S Basic Manual

Equivalent to this PDF manual.



W21S Manual

English version is not available.



In some of the displays used for descriptions in this manual, the icon display area at the top of the display and the soft key option display area at the bottom of the display may be omitted. Also, the typeface and shape of fonts used in displays may differ from those used in actual displays or may be omitted.

Etiquette

Cellphone etiquette

Cellphones emit weak radio waves at all times even if you just turn the power on. Enjoy and safely use your cellphone without forgetting those around you.

Some places forbid the use of cellphones.

- Do not use cellphones while you are driving. Doing so is dangerous and forbidden by law.
- Radio waves may interfere with airplane operation. Be sure to turn your cellphone off before you board airplanes.



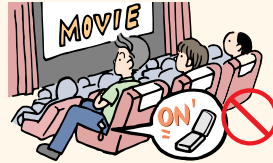
Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers. Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.



Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries and other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being inconvenienced by the incoming ring.



- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.



- Get other people's permission before you start taking photos with the cellphone's camera.

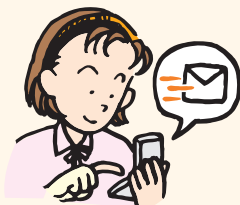


Basics of the cellphone

What W21S offers

Mail

You can send mail to other cellphones or PCs.



Read from
page **35**

Camera

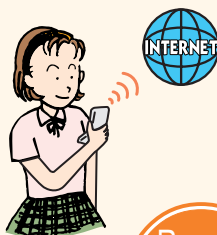
You can easily take photos and send them by e-mail.



Read from
page **54**

EZweb

You can download incoming melodies or wallpaper.




Read from
page **66**

EZchannel

You can periodically receive content and information like TV programs and magazines.



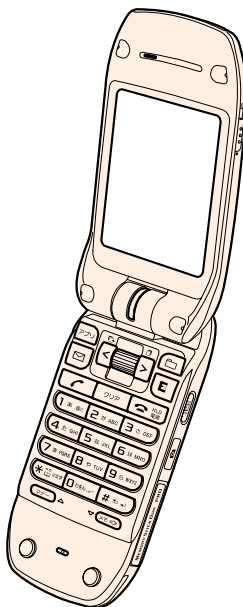Read from
page **74**



EZnaviwalk

You can confirm where you are now and be guided a route with a map or voice.



Read from
page **82**

Manner mode and record message

Manner mode

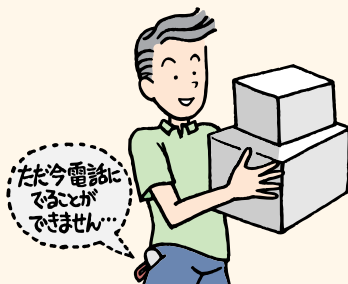


You can use the manner mode to turn incoming rings and other tones off to prevent others from being inconvenienced.

Hold down **マナー** for at least one second in the idle display.

See
page **26**

Record message



You can play answer messages and record messages from other parties when you cannot answer a phone call.

Hold down **メモ** for at least one second in the idle display.


See
page **27**

Check the power, radio waves, and battery!

Usually, keep the cellphone's "power" on.



To make or receive calls, turn the power on.


Hold down  for at least one second.

See
page 11

You cannot talk if you are not receiving "radio waves."

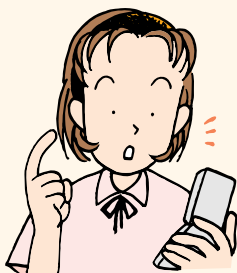


It is sometimes difficult to receive radio waves in some places even in service areas.

 indicates the reception state.

See
page 11

Pay attention to the remaining "battery" power.



Sometimes the cellphone does not function properly if the remaining battery power is low.

 indicates the remaining battery power.

See
page 11

Watch out for spam and one-ring calls!

If you get incoming spam...

You can use the mail filter function to disable reception of just mail you specify or block mail indicated as "未承諾広告" that contains lots of spam.

E-mail

The following mail functions are available for preventing arrival of spam:

- "未承諾広告フィルター": To block spam
- "アドレスフィルター": To filter various addresses

"指定拒否設定": To reject specified mail

"指定受信設定": To receive only specified mail


"なりすまし規制": To block mail from a spammer who pretends to be using a cellphone or PHS



See
page **48**

If you have an incoming call from an unknown number...

Such calls may be an invitation to you to return a call to services with very high charges. (This is a "one-ring call.")

The red icon  is displayed in the Received display when you receive a one-ring call.



Received	Dialed
① Aug 10 12:00	030003XXXX
② Aug 9 10:00	030004XXXX
③ Aug 9 9:00	Carol Adams
④ Aug 8 22:00	John Smith

See
page **23**

Contents

Etiquette	1
Cellphone etiquette	1
Basics of the cellphone	2
What W21S offers	2
Manner mode and record message	3
Check the power, radio waves, and battery!	4
Watch out for spam and one-ring calls!	5
Contents	6
Before use	8
Checking the package	8
Names of parts	9
Charging the battery pack	10
Turning the power on	11
Before using the English display	12
Learning the basics	12
Viewing the Cross menu	14
Viewing the display	16
Initial settings for e-mail and EZweb	17
Confirming your cellphone number/e-mail address	18
How to use the phone	19
Making a call	19
Receiving a call	20
Redialing the number you called (Dialed)	21
Redialing the number you received (Received)	22
Filtering one-ring calls	23
Changing the volume during a call	23
Changing the volume and tone of the incoming ring	24
Setting the manner mode	26
Setting the record message	27
Playing back recorded messages	28
How to use the phone book	29
Saving new data	29
Making a call from the phone book	31
Editing saved data	32
Saving a received call	34
How to use mail	35
Using e-mail	35
Changing your e-mail address	36
Creating and sending e-mail	39
Opening a received e-mail	42
Replying to a received e-mail	45
Opening a received e-mail with a photo or movie attached	47
Filtering spam	48


Using C-mail	49
Creating and sending C-mail	50
Opening a received C-mail	52
How to use the camera	54
What you can do with this camera	54
How to hold the camera	55
Taking photos	56
Recording movies	58
Viewing photos you have taken	60
Viewing movies you have recorded	62
Attaching a photo or movie to e-mail	64
Photo mail	65
How to use EZweb	66
EZweb	66
Viewing information sites	67
Saving your favorite sites	69
Viewing a site saved to the Favorite site	70
Confirming your call costs	71
Downloading an incoming melody	72
How to use EZchannel	74
What you can do with EZchannel	74
Enjoying EZchannel	76
Registering a program	77
Playing a program	78
Saving a program	80
How to use EZnaviwalk	82
What you can do with EZnaviwalk	82
Registering your home in "My-Spot"	84
Checking how to go home	86
How to use the infrared data exchange feature	87
Using the infrared data exchange feature	87
Using the infrared data exchange feature to send data	89
Using the infrared data exchange feature to receive data	90
Inputting text	91
Changing the input mode	91
Inputting text	92
Troubleshooting	96
Other features	97
How to use the "Memory Stick Duo"(commercial item)	97
Others	97
Index	99

Before use



Checking the package

The package contains the main unit and accessories.

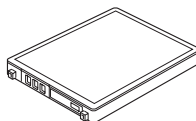 - Main unit
- Battery pack (inside the main unit)



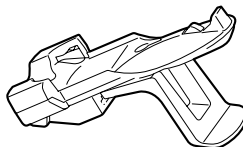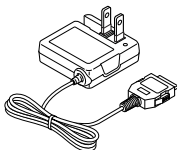- Sony Ericsson AC adaptor 03
- Desktop holder




- Basic Manual (Japanese)
- Manual (Japanese)



- Warranty (Japanese)
- Safety Precautions (Japanese)
- Introduction to EZ application (BREW™) (Japanese)

Names of parts

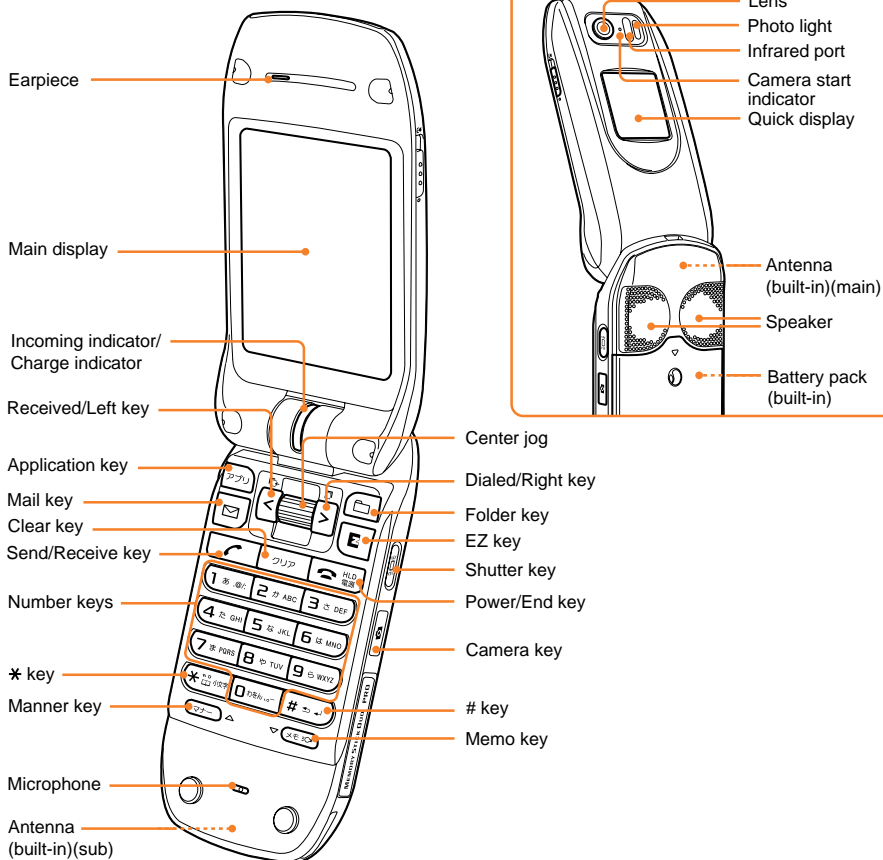
Before use




Charging the battery pack

Assembling the desktop holder

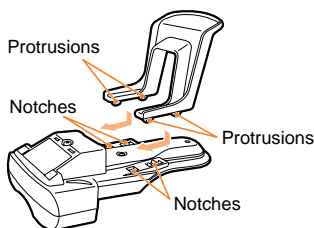When you use the desktop holder for the first time, be sure to follow the procedure below to assemble it.





Align the notches with the protrusions, and then insert the desktop holder in the direction of the arrow, while sliding it, until you hear a click.

 Once the desktop holder is assembled, you cannot remove it. Removing the desktop holder by force will cause damage.

Charging the battery pack

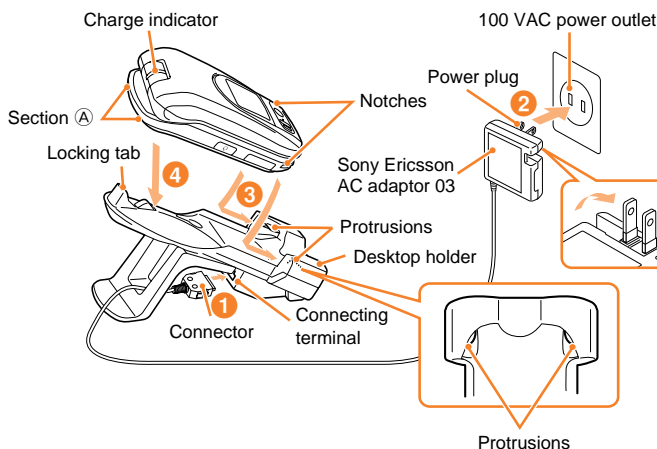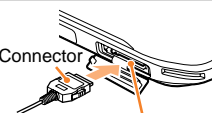When you purchase your W21S, the battery pack is not fully charged. Before you use the W21S, charge the battery pack.




You can also charge the battery pack by directly connecting the Sony Ericsson AC adaptor 03 to the W21S (Carefully check the connector shape).

- The charge indicator lamp lights in red Charging is in progress.
- The charge indicator lamp turns off Charging is finished.

1 Connect the Sony Ericsson AC adaptor 03 to the desktop holder (Carefully check the connector shape).

2 Fold out the power plug of the Sony Ericsson AC adaptor 03, and plug it into a 100 VAC power outlet.

3 Align the notches of the W21S to the protrusions of the desktop holder.



4 Insert the W21S into the locking tab of the desktop holder until it clicks into place.

 When removing the W21S, hold the desktop holder firmly and lift section ㊶ on the W21S.

Turning the power on






1 Hold down  for at least one second.

Check the remaining battery power.

			
Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.

Check the reception state.

				
Strong	Medium	Weak	Very weak	Out of service area

- You cannot receive or make calls if "Out of service area" is displayed.
- Sometimes you cannot receive or make calls if "Very weak" is displayed.



(idle display)

To Turn the power off

Hold down  for at least two seconds.

Before using the English display



- 1 Press  (スタート) in the idle display, and use  and  to select  (設定) "画面設定."
- 2 In the 画面設定 display, use  and  to select "Set Language" "English."


Learning the basics

Key operation

Center jog


Start with how to use  and .

	Press the center jog.
	Turn the center jog up or down.

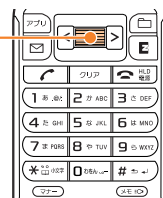



Soft keys



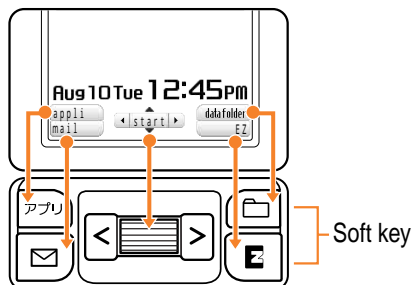
If the following items appear at the bottom of the display, press their soft keys; you can use the feature displayed for each soft key. The display varies depending on the screens.



If you have made a mistake

If you are unsure of an operation or you have made a mistake, return to the previous display by pressing  フリップ, or return to the idle display by pressing .

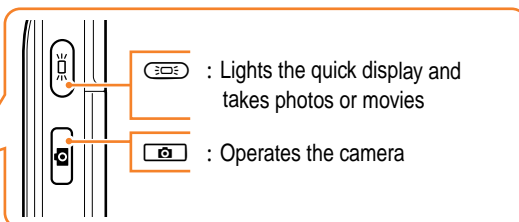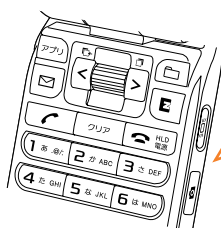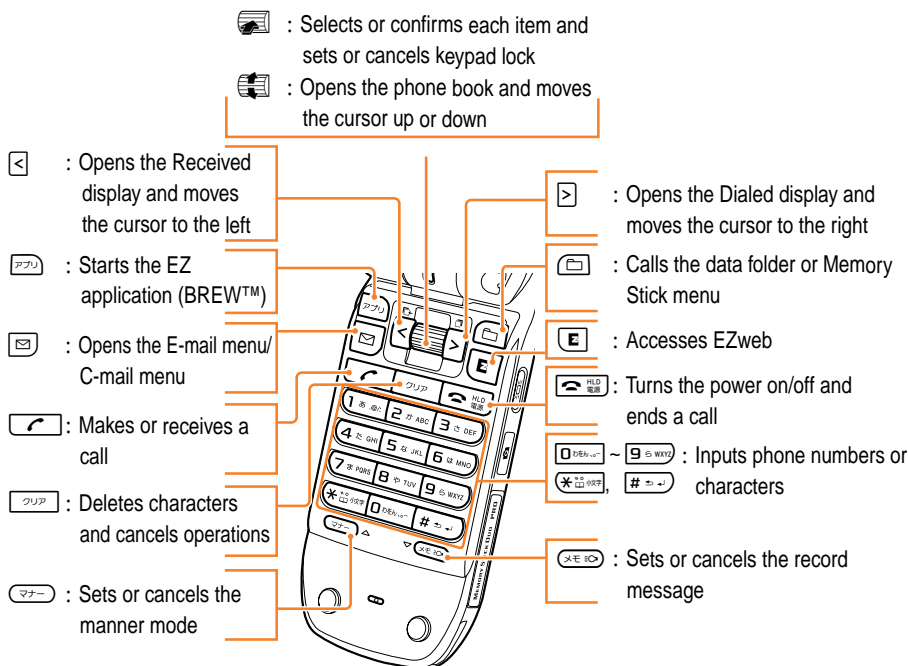Using keys




Default settings


The followings are set at the time of purchasing.

Chg lockcode (Change lockcode)	1234	Font size	EZweb font: Large font E-mail font: Largest font
Caller ID	ON		

Viewing the Cross menu

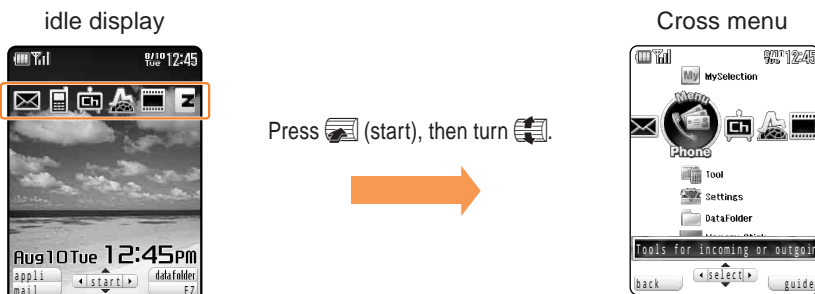The W21S allows you to call various menus from the Cross menu. The Cross menu is displayed by pressing  (start) in the idle display.





Before use



You can call the following menus from the Cross menu.









E-mail

	Create new
	Inbox
	Outbox
	Check new mail









Menu

	MySelection
	Phone
	Tool
	Settings
	DataFolder
	Memory Stick






EZnaviwalk

	Go out menu
	My-Spot
	Go home
	View My Map
	E-mail My Map
	EZnavi Portal








EZmovie

	EZmovie Portal
	LiveCamera Portal
	EZmovie list



EZweb


	Top menu
	Favorite site
	Screen memo
	URL Input
	Previous Display

Calling a menu from the Cross menu

Use , , , and to call a menu from the Cross menu.



- 1 Press (start) in the idle display.

 You can select an item on the Cross menu.



- 2 Turn to select a desired menu.

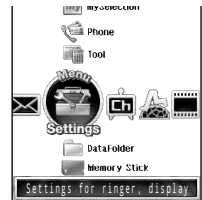
 
If you press or , you can move the cursor from side to side.



- 3 Press (select).

The selected menu appears.

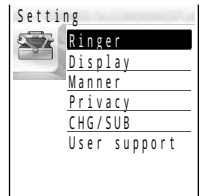 If you have made a mistake, press . You can cancel the operation or return to the previous display.




Viewing the display

You can check arrival of mail, function settings and other information by icons.


Main icons

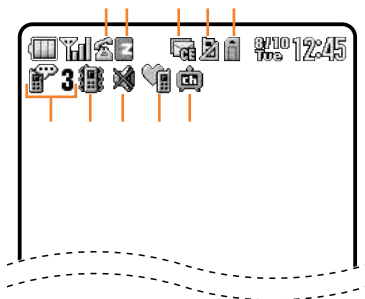Before use



Icon	Displayed contents
	During a call
	While you are using EZweb
	When mail has been received or when mail has not yet been read
	When there is a missed call
	When the "Memory Stick Duo" (commercial item) is inserted
	While record message is set The number of recorded messages (1~3)
	When the vibrator is set to "ON"
	When the ring volume is set to "OFF"
	While the manner mode is set
	When an EZchannel program is registered (appears if the program is updated.)

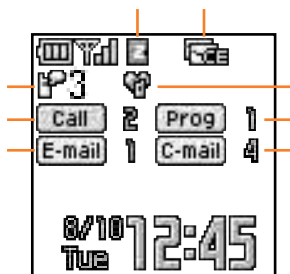How to view the quick display



Icon	Displayed contents
	While you are using EZweb
	When mail has been received or when mail has not yet been read
	While record message is set The number of recorded messages (1~3)
	While the manner mode is set
	When there is a missed call The number of incoming calls
	When there are new EZchannel programs The number of programs
	When there are incoming e-mails The number of received e-mails
	When there are incoming C-mails The number of received C-mails

Initial settings for e-mail and EZweb

You need to subscribe to the EZweb service to use the e-mail, EZweb service, EZ application (BREW™), EZnaviwalk and EZchannel. Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

 
Be sure to do initial settings before using the e-mail, EZweb services, etc.

Initial settings automatically determine your e-mail address.

To change that e-mail address to your preferred address, see page 36.


Skip this section if you are not going to use either e-mail or EZweb.

- 1** Press  (mail),  (EZ) or  (appli) in the idle display.




EZwebを利用するための初期設定を行います
「OK」を押してしばらくお待ちください

 - 2** Press  (ok).






ただいま初期設定を行っています。
しばらくお待ちください
（この程度かかり）

-  Wait a short while until the display on the right appears.
The initial settings are finished when the display on the right appears.

ようこそEZwebへ
お客様のメールアドレスは、
@ezweb.ne.jp
です。
— セント —
auのメルマガ「サービス」にはスボ

- 3** Press  (ok).

If you start with  (mail), the E-mail menu appears. If you start with  (EZ), the EZmenu appears. If you start with  (appli), the EZ application menu appears.




Start by 



Start by 

 





Start by 

Confirming your cellphone number/e-mail address



- 1** Press  (start) in the idle display.



The Cross menu appears.



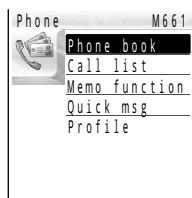 
- 2** Turn  to select  (Phone), and press  (select).





The Phone menu appears.

 

- 3** Turn  to select "Profile," and press  (select).

The profile display appears so that you can confirm your cellphone number and e-mail address.




-  You can also confirm your cellphone number and e-mail address by pressing  (start) and  in the idle display.
-  Your e-mail address is automatically determined when you make the initial settings. You can also change to an e-mail address you like (see page 36).

How to use the phone

Making a call

1 Press **0** ひろい to **9** WXYZ to input the other party's phone number.

 To call a regular phone, input the phone number starting with the area code.



030001XXXX



To notify the other party of your cellphone number

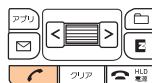
Input "186" before your cellphone number.

Not to notify the other party of your cellphone number

Input "184" before your cellphone number.



2 Press .


 When you have finished the call, press .



Receiving a call

1

 Press  or  (call) to answer the call.



When you have finished the call, press .

Duration

10



Display when you have received a call


Phone number	The other party has set to notify Caller ID. If the other party's name is already saved in the phone book, that person's name is also displayed.
"ID Unset"	The other party has set not to notify Caller ID.
"Payphone"	You have received a call from a payphone.
"Not support"	You have received a call from a party that is not able to notify you of his/her phone number.

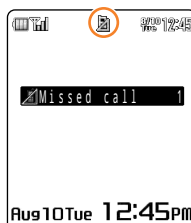
Susan Jones

0900001XXXX

Incoming call
ID Unset

Display if you could not answer a call


If you could not answer a call, you are notified that you had a call on the display. If you press  (select), you can confirm the phone number of the other party that called you and redial that party.



Redialing the number you called (Dialed)

1

 Press  in the idle display.





The Dialed display appears.




The Dialed display can hold the last 30 phone numbers you called in sequence from the most recent.

Received	Dialed
1 Aug 10	11:05
John Smith	
2 Aug 9	10:22
030004XXXX	
3 Aug 8	9:35
Carol Adams	
4 Aug 7	20:15
Kate Dickens	

2

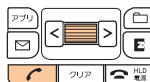Turn  to select the phone number you want to call, and press .




The call is connected to the phone number you selected.

Redialing the number you received (Received)

1

 Press  in the idle display.



The Received display appears.



The Received display can hold the last 30 phone numbers you received in sequence from the most recent.

Received	Dialed
① Aug 10 11:05	
Carol Adams	
② Aug 9 10:00	
030004XXXX	
③ Aug 8 10:32	
John Smith	
④ Aug 7 21:30	
Alan Nelson	

Icons





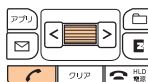
(blue): Indicates that you were not able to answer an incoming call.



(red): Indicates that the other party discontinued the call within three seconds.

2

Turn  to select the phone number you want to call, and press .




The call is connected to the phone number you selected.

Filtering one-ring calls

What is a one-ring call?

This is a call you receive from an unknown party. They ring only once and leave their phone number in your Received display to make you call back to that number and connect you to a service with very high charges.

One-ring call warning icon

When you have received a one-ring call (call time less than three seconds), the red icon  is displayed in the Received display. Be careful when you call back to a number you do not recognize.

Received	Dialed
① Aug 10 11:00 030001XXXX	
② Aug 9 10:00 030004XXXX	
③ Aug 8 9:00 Carol Adams	
④ Aug 7 22:00 John Smith	

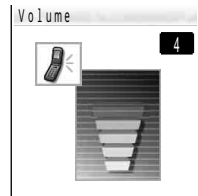
 
Changing the volume during a call

1

Turn  during a call.

 : The volume increases at five levels.

 : The volume decreases at five levels.







Changing the volume and tone of the incoming ring

Example: When setting a "preset" incoming ring


 
- 1** Press  (start) in the idle display.



The Cross menu appears.



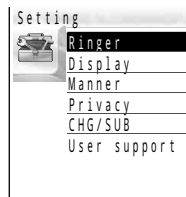
 
- 2** Turn  to select  (Settings), and press  (select).



The Setting menu appear.



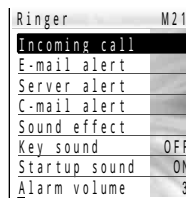
 
- 3** Turn  to select "Ringer," and press  (select).



The Ringer display appears.



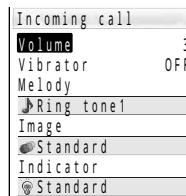
 
- 4** Turn  to select "Incoming call," and press  (select).

The Incoming call display appears.




- 5** Turn  to select "Volume," and press  (select).

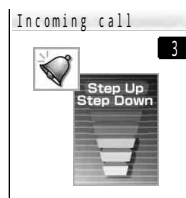 The ring volume adjustment display for incoming calls appears, and the incoming ring sounds.



 6 Turn to adjust the volume, and press (ok).





"OFF": The incoming ring does not sound.

"1" to "5": The incoming ring sounds at the level you set.

"Step Down": The volume of the incoming ring decreases.

 
"Step Up": The volume of the incoming ring increases.

 "Step Down" and "Step Up" can be selected by turning  up beyond "5."


The volume of the incoming ring for incoming calls is set.

 To end settings, jump to step 10.


7 Turn to select "Melody," and press (select).



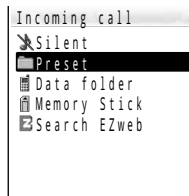
The ring tone selection display for incoming calls appears.



 
8 Turn to select "Preset," and press (select).



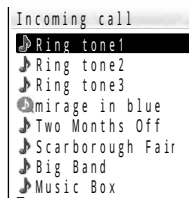
The preset ring tone selection display for incoming calls appears.



 If you press  (play), the incoming ring you selected plays back.


If you press  () while the incoming ring is being played, the incoming ring stops playing.

 9 Turn to select an incoming ring, and press (save).



The incoming ring is set.

 


10 Press (back).




Setting the manner mode

The W21S vibrates to notify you of incoming calls.





- Hold down **マナー** for at least one second in the idle display.**

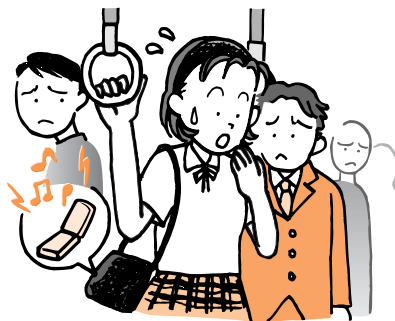
The manner mode is set, and ,  and  appear in the display.

At the same time, record message is set, and  appears in the display.




To cancel the manner mode

Hold down **マナー** for at least one second in the idle display. , ,  and  disappear from the display.





Setting the record message

- 1 Hold down  for at least one second in the idle display.





Record message is set, and  appears in the display.




-  You can use the record message to record a message from the other party by pressing  (memo) during reception of an incoming call.

To cancel record message

Hold down  for at least one second in the idle display.  disappears from the display.


-  You can record a message from the other party within 20 seconds (up to three messages).
-  If the record message still contains any message,  1 remains in the display even after you cancel record message.  1 disappears when record message data is deleted (page 28).



-  When you turn the power off or you are in a place where the radio waves are weak, use Voice Mail.

Playing back recorded messages

When a message is recorded

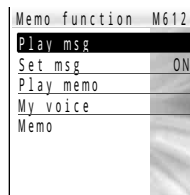
A message appears in the idle display, then  1 (number of recorded messages) also appears in the idle display.



1

Press  in the idle display.


The Memo function display appears.





2

 Turn  to select "Play msg," and press  (select).



The Play msg display appears.






3

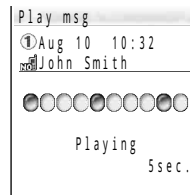 Turn  to select the recorded message to play back, and press  (play).

The recorded message plays back.



 You can delete recorded messages by pressing  (delete) while the recorded message is playing back or by pressing  (delete) after playing recorded message.

 
How to use the phone book

You can save phone numbers and e-mail addresses of parties that you frequently call or e-mail in the phone book and easily access those numbers and addresses to make calls or create e-mail.

Saving new data



- 1 Turn  in the idle display.




The phone book list appears.



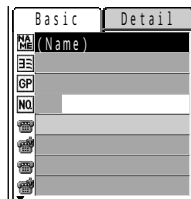
 
- 2 Press  (new).


The edit phone book display appears.




- 3 Turn  to select  (Name), and press  (select).

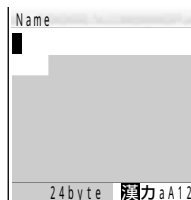  The Name display appears.






- 4 Input the name, and press  (ok).

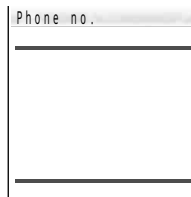
 
The edit phone book display reappears.
 (JP reading) is automatically inputted.



 For details on how to input text, see page 91.


- 5 Turn  to select  (Phone no.1), and press  (select).



The Phone no. display appears.




Saving new data (continued)

6 Input the phone number, and press (ok).

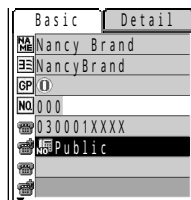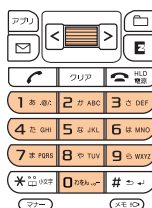The edit phone book display reappears.
"Public" is automatically inputted at  (phone type).




 If the phone number to save is a regular phone, start by inputting the area code.


 To end saving the phone book, jump to step 9.

7 Turn to select (Mail address1), and press (select).

 
The Mail address display appears.




8 Input the e-mail address, and press (ok).

The edit phone book display reappears.
"Public" is automatically inputted at  (e-mail address type).

 



 For details on how to input e-mail addresses, see page 92.


 You can input the domain (see page 36) following @ in the e-mail address such as "@ezweb.ne.jp" using phrases (see page 95).

9 Press (cmplt).

The information is saved in the phone book.



 The entry is automatically saved to the smallest available memory number from 000 to 499.

 
 You can also save other items such as groups, incoming rings, postal addresses, and birthdays.

Making a call from the phone book

1

Turn  in the idle display.


The phone book list appears.



あ	か	さ	た	な	は	ま	や
相	原	太	一				
青	木	一	郎				
赤	坂	花	子				
阿	部						
井	田						
伊	藤						
宇	野						
江	口						

To switch from the "あ" to "ETC" display lines

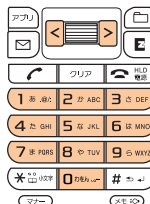 Press  or .




た	な	は	ま	や	ら	わ	A
Alan	Nelson						
Brian	Miller						
Carol	Adams						
Jane	Moore						
John	Smith						
Kate	Dickens						
Nancy	Brand						
Ron	Edwards						

2



 Turn  to select the other party to call, and press  (select).

The information saved for the other party that you selected appears.





Basic	Detail
①	Nancy Brand
②	NancyBrand
NO	000
MO	030004XXXX
MO	030002XXXX
MO	0900003XXXX
MAIL	@ .ne.jp
MAIL	@ .ne.jp

3

Turn  to select the phone number you want to call, and press .

 The call is connected to the phone number you selected.



If you select the e-mail address and press  (mail), the Create display appears.

For details on how to create e-mail, see page 39.

 
Editing saved data

Example: To edit phone numbers

1

Turn  in the idle display.

The phone book list appears.



あ	か	さ	た	な	は	ま	や
相	原	太	一				
青	木	一	郎				
赤	坂	花	子				
阿	部						
井	田						
伊	藤						
宇	野						
江	口						


To switch from the "あ" to "ETC" display lines

Press  or .




た	な	は	ま	や	ら	わ	A
Alan	Nelson						
Brian	Miller						
Carol	Adams						
Jane	Moore						
John	Smith						
Kate	Dickens						
Nancy	Brand						
Ron	Edwards						

2

Turn  to select the address to edit, and press  (select).

 The information saved for the address that you selected appears.




Basic	Detail
①	Nancy Brand
③	NancyBrand
NO	000
030004XXXX	
030002XXXX	
0900003XXXX	
@	.ne.jp
@	.ne.jp

3



 
Press  (edit).


The edit phone book display appears.



Basic	Detail
Nancy Brand	
NancyBrand	
GP	①
NO	000
030001XXXX	
Public	
030002XXXX	
Home	

4

 Turn  to select the item you want to edit (in this case, ) and press  (select).



Phone no.

030001XXXX

 



See steps 3 and 4 on page 29 to edit names, and see steps 7 and 8 on page 30 to edit e-mail addresses.

5

Edit the information, and press  (ok).



Press  to delete a saved character.

 To delete all characters, hold down  for at least one second.




Basic	Detail
NAME	Nancy Brand
姓	NancyBrand
GP	①
NO	000
	030004XXXX
種別	Public
	030002XXXX
種別	Home

6

Press  (cmplt).

 The edited data is saved in the phone book.




たなほまやらわ	A
Alan Nelson	
Brian Miller	
Carol Adams	
Jane Moore	
John Smith	
Kate Dickens	
Nancy Brand	
Ron Edwards	

Saving a received call



Example: To save from the Received display

 - 1** Press  in the idle display.

The Received display appears.




Received	Dialed
① Aug 10 11:05 030004XXXX	
② Aug 9 10:22 Susan Jones	
③ Aug 8 9:35 Carol Adams	
④ Aug 7 22:00 John Smith	

- 2** Turn  to select the phone number to save in the phone book, and press  (save).

"New": Creates and saves a new address.

 "Add": Adds and saves newly added information to an address already in the phone book.





Select way to
save to
phone book



New
Add

 - 3** Turn  to select "New," and press  (select).

The edit phone book display appears. The phone number you selected is automatically inputted.



 For details on how to save information in the phone book, see steps 3 to 9 on pages 29 and 30.

 To save information in the phone book from the Dialed display, press  in the idle display to display the Dialed display, and do steps 2 and 3.

How to use mail

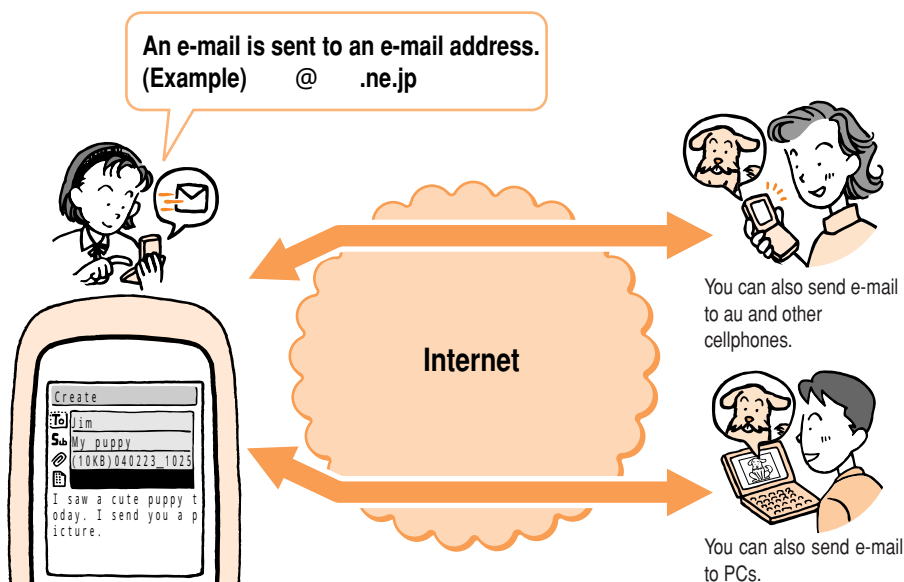 
Using e-mail

You need to subscribe to the EZweb service to use the e-mail service. Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

Be sure to do initial settings before using the e-mail and EZweb services.


If you have not done initial settings yet, see page 17.

The e-mail service allows you to exchange mail with PCs or cellphones that support e-mail using Internet e-mail addresses. Besides being able to send mail comprising up to 5,000 double byte characters, you can also send photos and movies.



Changing your e-mail address

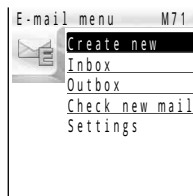
 
e-mail address



Example : @ezweb.ne.jp

Changeable part Domain



- 1** Press  (mail) in the idle display.



The E-mail menu appears.





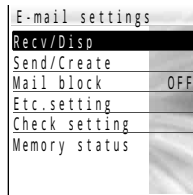 

- 2** Turn  to select "Settings," and press  (select).

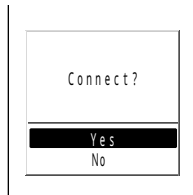
 
The E-mail settings display appears.





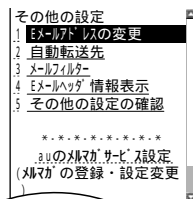 
- 3** Turn  to select "Etc. setting," and press  (select).



- 4** Turn  to select "Yes," and press  (select).



 
- 5** Turn  to select " E メールアドレスの変更," and press  (Select).




お客様の暗証番号を入力してください。
暗証番号を1日に3回間違えると、翌日まで設定操作はできません。

送信 リセット

 
- 6** Turn  to select the input field, and press  (Edit).



-  Note that no setting operation is allowed until the following day if you enter the wrong security code three times in one day.

[Input Text]



4char 漢字 aA 12

 
- 7** Input your security code, and press  (ok).



お客様の暗証番号を入力してください。
暗証番号を1日に3回間違えると、翌日まで設定操作はできません。

送信 リセット

- 8** Turn  to select " 送信," and press  (Select).






Eメールアドレスを変更します。
以下のご注意を確認した上でアドレスの変更を行ってください。

入力前の注意
アドレスを変更した

承諾する

戻る

 - 9** Turn  to select " 承諾する," and press  (Select).





Eメールアドレスを変更します。
ご希望のEメールアドレスを入力してください。

 
@ezweb.ne.jp

送信 リセット

前のページへ


Changing your e-mail address (continued)

- 10** Turn  to select the input field, and press  (Edit).



[Input Text]

20 char 漢力 8/12

- 11** Input the section preceding @, and press  (ok).






メールアドレスを変更します。
ご希望のメールアドレスを入力してください。

 
@ezweb.ne.jp

送信 リセット

前のページへ

 For details on how to input e-mail addresses, see page 92.

- 12** Turn  to select "送信," and press  (Select).



新しいメールアドレスは

@ezweb.ne.jp

ご注意

 
アドレスを変更した場合は
変更前のアドレスを再度利用
することはできません。

OK キャンセル

When an e-mail address cannot be changed

- The e-mail address that you inputted is already being used.
Input a different e-mail address.
- Unsupported characters have been inputted. Use characters that are supported
(See page 92).

- 13** Turn  to select "OK," and press  (Select).



正常に変更されました。

auがお届けする
メルマガ サービス
(情報料無料)

ぜひご登録下さい。
お申し込みへ

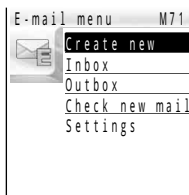 
 
お申し込みされない場合



 For details on how to confirm e-mail address, see page 18.

Creating and sending e-mail



- 1 Press  (mail) in the idle display.

The E-mail menu appears.





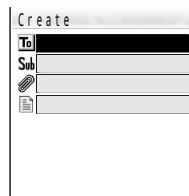  

- 2 Turn  to select "Create new," and press  (select).

The Create display appears.

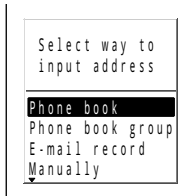 
 


Icons

- To** (Address): Input the e-mail address of the party you want to send the e-mail to.
- Sub** (Subject): Input the subject of the e-mail.
-  (Attachment): Attach data to e-mail.
-  (Main text): Input the main text of the e-mail.


- 3 Turn  to select **To** (address), and press  (select).

The input method selection display appears.





Input methods


Phone book	Quotes an e-mail address saved in the phone book.
Phone book group	Quotes all e-mail addresses saved in the selected group of phone book.
E-mail record	Quotes an e-mail address from e-mails that have been sent or received so far.
Manually	Input an e-mail address manually.
Profile	Quotes your own e-mail address.

-  There are three types of destinations: To, Cc and Bcc. You can send e-mail to up to five destinations at a time (up to 640 single byte characters including To, Cc and Bcc).

Creating and sending e-mail (continued)

- 4** Turn  to select "Manually," and press  (select).

 
The To(mandatory) display appears.



To(mandatory)

640byte 漢力 aA12

- 5** Input the e-mail address, and press  (ok).

 If the domain (page 36) following "@" in the address is "@ezweb.ne.jp," the domain is automatically added when sending the mail.





Create

 
To @.ne.jp

Sub

100byte 漢力 aA12


- 6** Turn  to select Sub (subject), and press  (select).

The Subject display appears.



Subject

100byte 漢力 aA12

- 7** Input the subject, and press  (ok).






Create

 
To @.ne.jp

Sub Tomorrow's meetin

10000byte 漢力 aA12


- 8** Turn  to select  (main text), and press  (select).

The Input text display appears.



Input text

10000byte 漢力 aA12

- 9** Input the main text, and press  (ok).



Create

To: @.ne.jp

Sub: tomorrow's meeting

Hi, tomorrow's meeting is held at 10:00.

- 10** Press  (send).

The Select sending display appears.



Select sending

1 Send


2 Photo mail


3 My e moji

4 Easy e moji

Send methods


Send	Sends e-mail to the inputted address.
Photo mail	Sends images taken or recorded with the camera after converting them so that they can be viewed on a non-au cellphone or an au cellphone that does not support the movie mail service.
My e moji	Sends au e mojis (icons) in a way that they can be viewed on a non-au cellphone as they are.
Easy e moji	Sends au e mojis after converting them into non-au e mojis.

 After you select "Photo mail," "My e moji" or "Easy e moji," the inputted e-mail address is automatically changed.

 "My e moji" and "Easy e moji" are charged services and require a separate application for the EZweb content "e moji mail."


- 11** Turn  to select "Send," and press  (select).

 The e-mail is sent.



Sending
E-mail




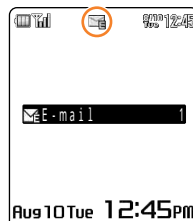 
 When sending finishes, the display on the right appears, and the sent e-mail is saved in the Outbox.

Send complete

Opening a received e-mail

When you receive an e-mail

A message appears in the idle display, then  also appears in the idle display.



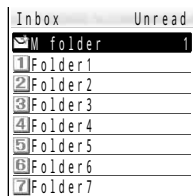 
 
1

Press  (select).



The Inbox display appears.

Icon



: Indicates the folder containing new mail.




2


Turn  to select the folder containing new mail, and press  (select).

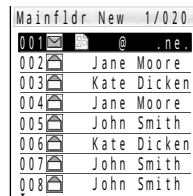  The received mail list display appears.



Icons

 
: Indicates "read mail" that has already been read.

: Indicates "unread mail" that has not yet been read.

: Indicates that a photo is attached to the mail.


3





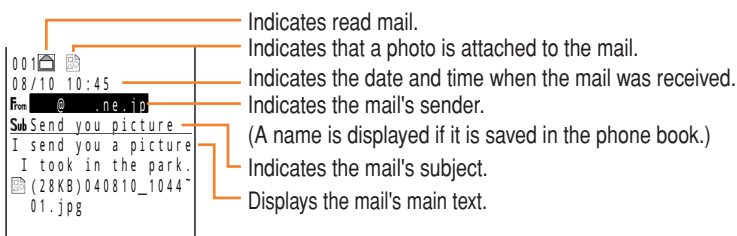 
Turn  to select the new mail, and press  (viewer).




The content of the mail appears.

 How to view received mail



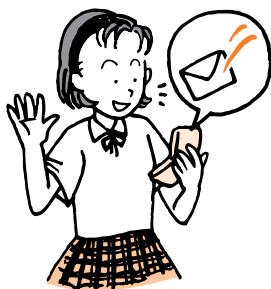 
-  Hold down  for at least one second changes the font size.
-  Pressing  or  returns the display to the received mail list display.





Opening a received e-mail (continued)

To open an e-mail in the Inbox


1

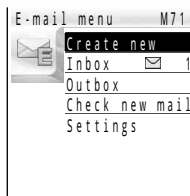  Press  (mail) in the idle display.







The E-mail menu appears.

Icon

: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.



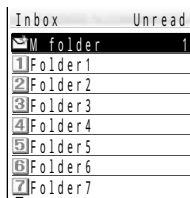  2



Turn  to select "Inbox," and press  (select).



The Inbox display appears.



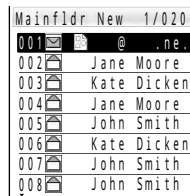  3


Turn  to select the folder containing the mail you want to read, and press  (select).



The received mail list display appears.

4

 Turn  to select the mail you want to read, and press  (viewer).





The content of the mail appears.

Replying to a received e-mail



1

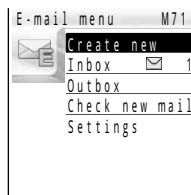  Press  (mail) in the idle display.



The E-mail menu appears.





2

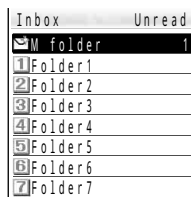  Turn  to select "Inbox," and press  (select).



The Inbox display appears.





3

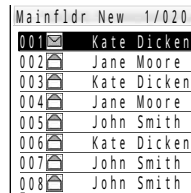 
 
Turn  to select the folder containing the mail you want to reply to, and press  (select).

The received mail list display appears.



4

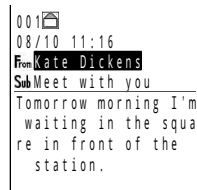  
Turn  to select the mail you want to reply to, and press  (viewer).





Replying to a received e-mail (continued)

5 Press **E** (reply).


The Create display appears.

 
 **Sub**(subject) is prefixed with "Re:," and the main text of the e-mail is quoted.




Create	
To	Kate Dickens
Sub	Re:Meet with you
	
Tomorrow morning I'm waiting in the square in front of the	

 6 Turn to select (main text), and press (select).




Input text	
	
Tomorrow morning I'm waiting in the square in front of the station.	
9926byte 漢字力aA12	


7 Input the main text, and press (ok).


 To edit **Sub** (subject), see steps 6 and 7 on page 40.



Create	
To	Kate Dickens
Sub	Re:Meet with you
	
Thanks for your mail. I'm looking forward to seeing you.	

8 Press **E** (send).

  For details on how to send mail, see steps 10 and 11 on page 41.



Select sending	
1	Send
2	Photo mail
3	My e moji
4	Easy e moji

Opening a received e-mail with a photo or movie attached

Example: To view a photo and play back a movie attached to a received e-mail

1

See steps 1 to 3 in "Opening a received e-mail" (pages 42 and 43) to view the content of a mail.

The photo appears.



Turn to select a photo, and press (view) to view the entire photo in the display.



 
Some photos do not appear automatically depending on their size. If a photo does not appear, go to step 2.



How to use mail

2

Turn to select a file name, and press (recv).



The movie is received. Press (play) to view the movie.



Receiving
attached data








Filtering spam

Setting the mail filter

The mail filter function allows you to block spam or set the W21S to receive only specified mail. You can also block mail indicated as "未承諾広告" that contains lots of spam.

Follow the procedure below to use the mail filter function.

- ① Press  (mail) in the idle display, and use  and  to select "Settings"
"Etc. setting."
- ② Use  and  to select "Yes" "3 メールフィルター," and input your security code.


The mail filter function contains the following functions.


未承諾広告フィルター

This filter allows you to block mail containing "未承諾広告" in its subject.

アドレスフィルター

全受信	All e-mails are received.
指定受信 設定	E-mails whose e-mail addresses are specified are only received. "一括指定先" : This specifies Internet and cellphone domains. "個別指定" : This specifies the section preceding @, the domain or the entire e-mail address.
指定拒否 設定	This specifies the section preceding @, the domain or the entire e-mail address, and blocks only those specified e-mails.
なりすまし 規制	This filters e-mail from a spammer who pretends to be using a cellphone or a PHS when you set "全受信" and "規制する" simultaneously.

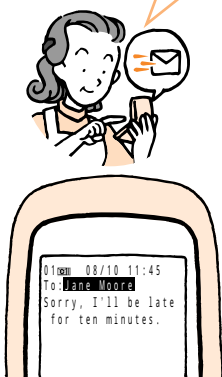 
 By changing your e-mail address, you can prevent spam from being received.
For details, see page 36.

 C-mail also provides a function to block spam.

Using C-mail

C-mail is a service that allows you to exchange mail with other au cellphones that support C-mail using cellphone numbers. You can send mail comprising up to 50 double byte characters by C-mail.

C-mail is sent to a cellphone number.
(Example) 090-0001-XXXX



Via au

Just input a message
and select the other
party's cellphone
number.

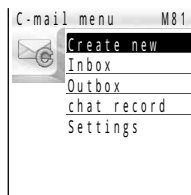
 
You can send C-mail to
au cellphones.





Creating and sending C-mail



- 1** Hold down  (mail) for at least one second in the idle display.


The C-mail menu appears.




- 2** Turn  to select "Create new," and press  (select).

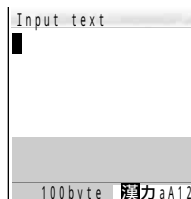 The Input text display appears.




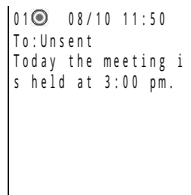- 3** Input the main text, and press  (ok).





- 4** Press  (send).

 
The send mode selection display appears.



Send modes

C-mail	Sends mail in the regular mode. This mode allows you to exchange mail between cellphones that support C-mail.
Chat	Sends mail as mail in the chat mode. This mode allows you to exchange mail continuously with the other party.

 - 5** Turn  to select "C-mail," and press  (select).





Enter
phone number


Phone book
C-mail record
Manually

The input method selection display appears.

Input methods

Phone book	Quotes a cellphone number saved in the phone book.
C-mail record	Quotes cellphone numbers from C-mails that have been sent or received so far.
Manually	Input a cellphone number manually.

 - 6** Turn  to select "Manually," and press  (select).



Phone no.

The Phone no. display appears.

 
- 7** Input the cellphone number, and press  (send).



0900001XXXX


Send

- 8** Press  (select).



Sending C-mail
(Normal mode)


The C-mail is sent.

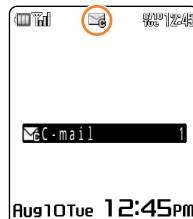 
-  When the mail arrives at the other party, "Sending completed" is displayed, and the sent mail is saved in the Outbox.



Opening a received C-mail

When you receive a C-mail


A message appears in the idle display, then  also appears in the idle display.



1

Press  (select).

 The content of the mail appears.




001 08/10 12:45
Jane Moore
Tomorrow the meeting
will be held at 3
:00 pm. TEL030001XX
XX

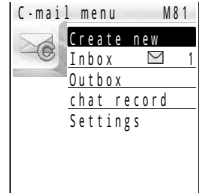 
 
To open a C-mail in the Inbox



- 1 Hold down  (mail) for at least one second in the idle display.

The C-mail menu appears.



Icon



: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.



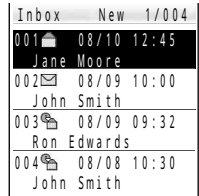 
 
- 2 Turn  to select "Inbox," and press  (select).

The Inbox display appears.



- 3 Turn  to select the C-mail you want to read, and press  (viewer).

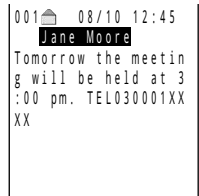  The content of the mail appears.



How to use the camera

The W21S has the camera of 1.3 million valid pixels and allows you to take photos and record movies.

You can send photos and movies you have taken attached to e-mail.

You can also send and receive data between au cellphones with the infrared data exchange feature.

What you can do with this camera

1 You can have fun with photos and movies on the W21S.

You can set photos you have taken as the idle display, or save photos or movies to the phone book or display them when you have an incoming call.



2 You can mail photos and movies.

See
page 64

You can send photos and movies attached to e-mail. The VGA, SXGA format is ideal for using photos on personal computers.



3 You can use the infrared data exchange feature.

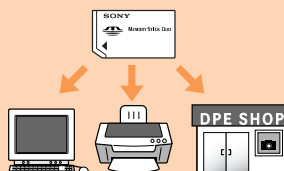
See
page 87

You can also send and receive data between au cellphones with the infrared data exchange feature.




4 You can print out photos or browse them using a PC.

You can save photos you took in the "Memory Stick Duo" (commercial item) and print them out with a printer or at a photo shop, or browse them using a PC.



How to hold the camera

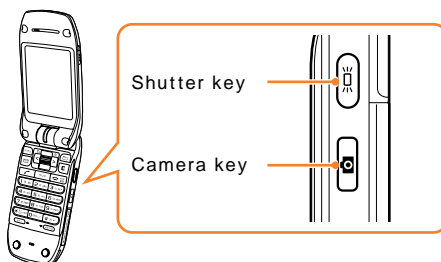



Taking photos and movies with your cellphone folded out

To take "QVGA" or "QQVGA" photos



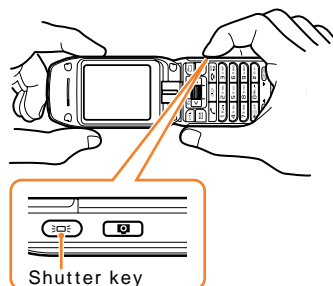
To take "VGA" or "SXGA" photos or record movies




 Be sure not to cover the lens by left hand.

Taking photos and movies with your cellphone closed (for self-portraits)

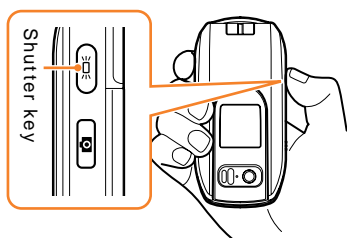To take "QVGA" or "QQVGA" photos



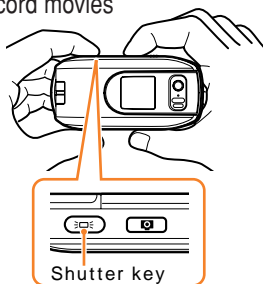 
To take "VGA" or "SXGA" photos or record movies




Taking photos

1

Hold down  (camera key) on the side of your cellphone for at least one second in the idle display.

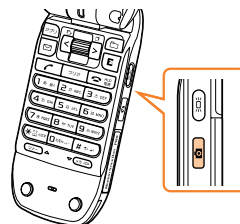The photo monitor screen appears.



2

Display the subject you want to take on the photo monitor screen.




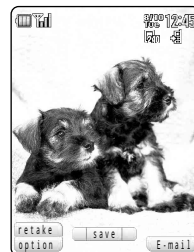
 
3

Press  (shoot).

You hear the shutter sound, and the photo you have taken is displayed (preview screen).

 


You can also take photos by pressing  (shutter key) on the side.



4


Press  (save).



"Saved in data folder" is displayed, and the display returns to the monitor screen.

Saved in
data folder




You can also save photos by pressing  (shutter key) on the side.



Photos are saved in the "Photo folder" of the data folder. Each photo is titled as follows:

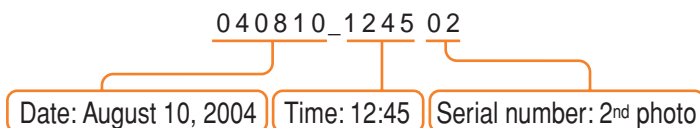Example of a photo title





There are four photo shoot modes: "QVGA," "QQVGA," "VGA," and "SXGA." Photo titles are different from the above if "VGA" or "SXGA" photos are taken.

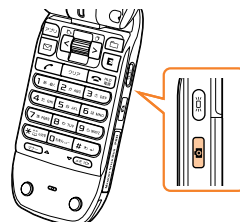


Recording movies

1



Hold down  (camera key) on the side of your cellphone for at least one second in the idle display to display the photo monitor screen. Press  (camera key) again.

The movie monitor screen appears.





2

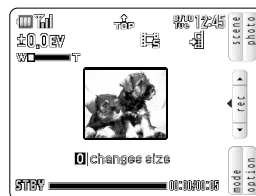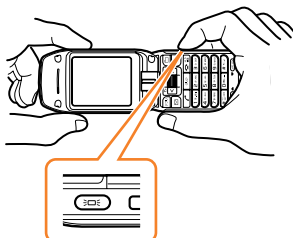
Hold the W21S with both hands, then display the subject you want to take on the movie monitor screen.



3

Press  (shutter key) on the side of your cellphone.

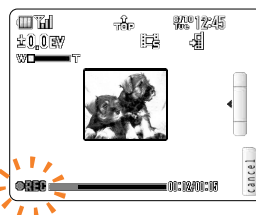You hear the shutter sound, and  flashes when recording starts.



 You can also record images by pressing  (rec).

To cancel recording


Press  (cancel). Recording is canceled, and the monitor screen reappears.

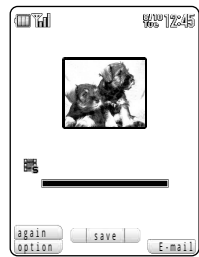
To stop recording

Press  (shutter key) or  ().

When you stop recording or the recording time ends

The initial recorded screen is displayed vertically (preview screen).


-  The default recording time is five seconds. The recording time setting can be changed.



(preview screen)



 4


Press  (save).



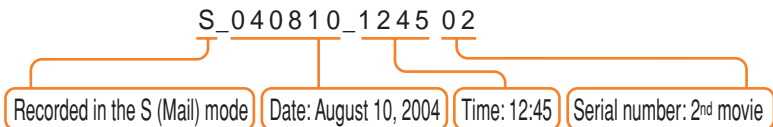
"Saved in data folder" is displayed, and the display returns to the movie monitor screen.




-  You can also save movie by pressing  (shutter key) on the side.

-  Movies are saved in the "Movie folder" of the data folder. Each movie is titled as follows:


Example of a movie title



-  There are five movie record modes: "Standard S," "Standard M," "High quality M," "High quality L," and "Video LL." Movie titles are different from the above if other than "Standard S" movies are recorded.

Viewing photos you have taken

Example: To play back data from the Photo folder

 
- 1 Hold down  (camera key) on the side of your cellphone for at least one second in the idle display.

The photo monitor screen appears.




- 2 Press  (option).


The Function menu appears.



```
photo album
shoot setting
image edit
scene selection
white balance
photo setting
continuous
self-timer
```



 - 3 Turn  to select "photo album," then press  (select).

The Photo album display appears.



```
Photo album
Photo fldr
DigiCame fldr
Photo fldr(M.S.)
```

Photo fldr	Displays the Photo folder in the data folder.
DigiCame fldr	Displays the DigiCame folder in the "Memory Stick Duo," which is inserted in the W21S.
Photo fldr (M.S.)	Displays the Photo folder in the "Memory Stick Duo," which is inserted in the W21S.

- 4 Turn  to select "Photo fldr," and press  (select).

The Photo folder display appears.

 



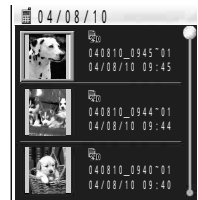 






Photo folder	
Data disp	36
04/08/10	9
04/08/09	27

 - 5** Turn  to select the date folder containing the photo you want to view, and press  (select).



Three photos in the date folder in "Photo folder" appear starting with the photo taken most recently.

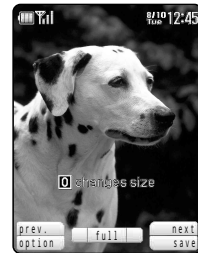  - 6** Turn  to select the photo you want to view, and press  (view).





The photo you selected appears.

About the "Memory Stick Duo" (commercial item)



If you take photos with "VGA" or "SXGA" by inserting the "Memory Stick Duo" in the W21S, their images are saved in the "DigiCame folder" in the "Memory Stick Duo."

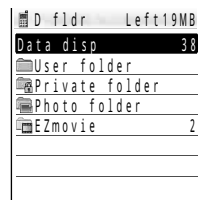 
 
Viewing photos you have taken from the data folder

- 1** Press  (data folder) in the idle display.



The Data folder display appears.

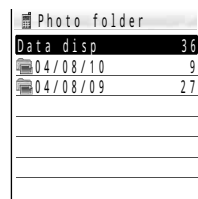  - 2** Turn  to select "Photo folder," and press  (select).



The Photo folder display appears.

 For the following procedures, see steps 5 and 6 above.

Viewing movies you have recorded

Example: To play back data from the Movie folder

 
1

See step 1 in "Recording movies" (page 58) to view the movie monitor screen.

2



Press  (option).

The Function menu appears.

 


movie album
record setting
picture effect
scene selection
white balance
movie setting
self-timer
photo light

3

Turn  to select "movie album," and press  (select).



The Movie album display appears.




Movie album
Movie fldr
Movie fldr(M.S.)

Movie fldr	Displays the Movie folder in the data folder.
Movie fldr (M.S.)	Displays the Movie folder in the "Memory Stick Duo," which is inserted in the W21S.

4



 Turn  to select "Movie fldr," and press  (select).

The Movie folder display appears.




Movie folder	
Data disp	15
04/08/10	9
04/08/09	6

5



 Turn  to select the date folder containing the movie you want to view, and press  (select).

Three movies in the date folder in "Movie folder" appear starting with the movie recorded most recently.





04/08/10	
S_040810_1047*01	04/08/10 10:47
S_040810_1044*01	04/08/10 10:44
S_040810_1030*01	04/08/10 10:30

6

Turn  to select the movie you want to view, and press  (play).

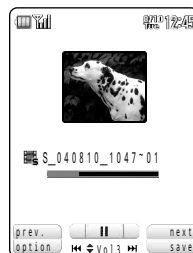 The movie you selected is played back.



About the "Memory Stick Duo" (commercial item)

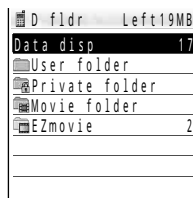
 
If you record movies with "Video LL" by inserting the "Memory Stick Duo" in the W21S, their images are saved in the "Movie folder" in the "Memory Stick Duo."

Viewing photos you have taken from the data folder



1

Press  (data folder) in the idle display.

The Data folder display appears.



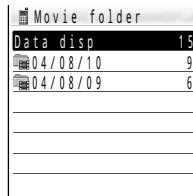
 
2

Turn  to select "Movie folder," and press  (select).

The Movie folder display appears.




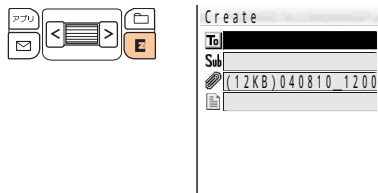
For the following procedures, see steps 5 and 6 on pages 62 and 63.



Attaching a photo or movie to e-mail

1

Press  (E-mail) in the preview screen immediately after you have taken the image.



"Saved in data folder" is displayed, and the Create display appears.







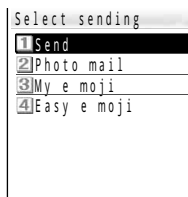
-  The photo or movie you have taken is automatically attached to an e-mail  (attachment). For details on how to create e-mail, see steps 3 to 11 on pages 39 to 41.
-  "Other phone cannot play size over case happen" may appear. Turn  to select "Attach on," and press  (select).
-  Photos and movies already saved in the data folder can also be attached to e-mail. The photo you have taken with "SXGA" may not be sent in size as it is.

Photo mail

You can use "Photo mail" to automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using an au cellphone. To use Photo mail, you must change the other party's e-mail address to a Photo mail address. If you select "Photo mail" for the automatic address change function (display on the below, page 41) when sending e-mail, the other party's e-mail address is automatically changed (as shown below) before sending.



Other party	E-mail address	New address
DoCoMo	@docomo.ne.jp	@d.nepm.jp
Vodafone	@ .vodafone.ne.jp	@ .vodafone.nepm.jp
TU-KA and au phones that do not support Movie mail	@ezweb.ne .jp	@ezweb.nepm.jp

: varies according to the area.



"Photo mail" requires no application.

How to use EZweb

EZweb

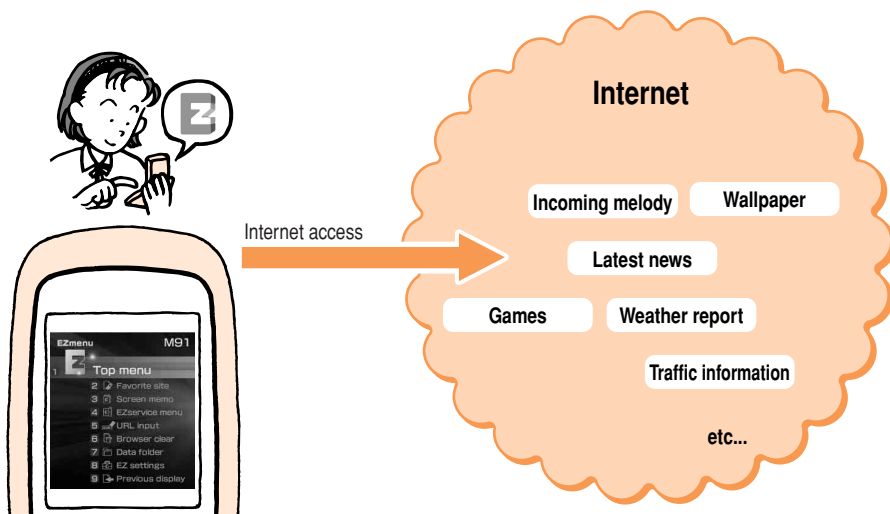
You need to subscribe to the EZweb service to use the EZweb service.

Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

Be sure to do initial settings before using the e-mail and EZweb services. If you have not done initial settings yet, see page 17.


EZweb is an information service that allows you to enjoy the Internet on your cellphone.

With EZweb, you can obtain incoming melodies, the latest news, and other contents from information sites.



Viewing information sites

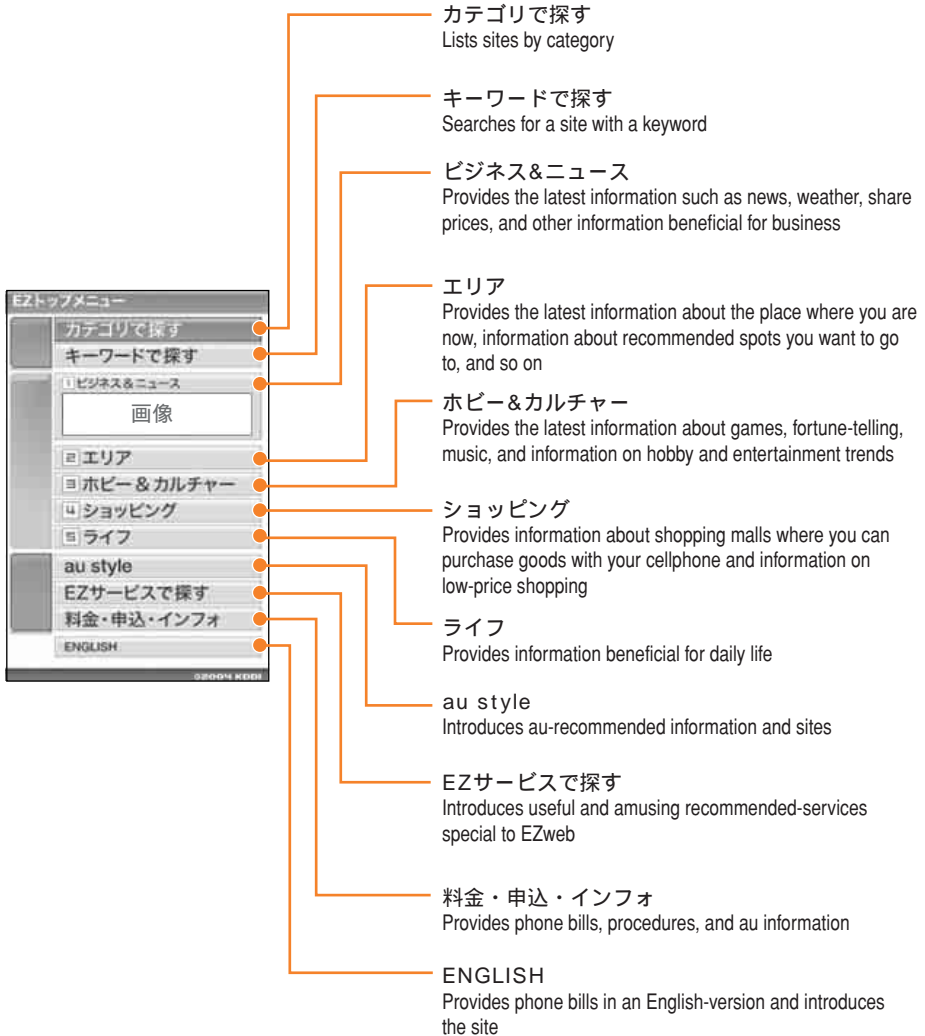EZweb allows you to access handy, fun information sites from the EZ Top menu.



The display layout and content are just an example. These are subject to change.



 
Some information sites are subject to additional information costs besides communications costs.

Viewing information sites (continued)

To display the EZ Top menu

1

Press **[E]** (EZ) in the idle display.



The EZmenu appears.

 


Press **[E]** (EZ) in the EZmenu; you can access "SonyEricsson@ez."



2


Turn **[Left/Right]** to select "Top menu," and press **[Enter]** (ok).



The EZ トップメニュー (EZ Top menu) display appears.



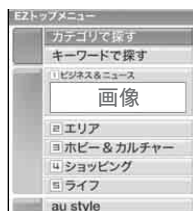It may take a short while for the display to appear.



To access information sites

Turn **[Left/Right]** to select the desired information site, and press **[Enter]** (Select).



[クリア] : Pressing this button returns the display to the previous display. Holding it down for at least one second returns the display to the EZ Top menu.



[終了] : Exits EZweb.



[Up/Down] : Scrolls the display up and down.



[Left] : Returns to the previous display.



[Right] : Goes to the next display (available only when a display was previously viewed).

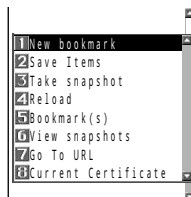
 




(sample display)

Saving your favorite sites


- 1 Display the site you want to save, and press **E** (Browser Menu).

The Browser Menu appears.




- 2 Turn  to select "New bookmark," and press  (Select).

 
The display for saving the title and URL appears.



- 3 Press **E** (cmplt).

The currently displayed site is saved to the Favorite site.

 -  You can register up to 100 sites in the Favorite site. However, some sites may not be registered.




Viewing a site saved to the Favorite site



1

 Press  (EZ) in the idle display.



The EZmenu appears.





2

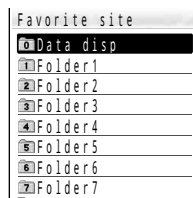 Turn  to select "Favorite site," and press  (ok).


The Favorite site display appears.



 
 
3

Turn  to select a folder, and press  (select).

 
The favorite list display appears.



4

Turn  to select the site you want to view, and press  (select).

The site you want to view appears.




Confirming your call costs

You can confirm call and transmission charges.



 
1

Press **E** (EZ) in the idle display.





 
The EZmenu appears.



You can also display the 料金照会 display on the step 4 by pressing  (start) in the idle display, then using  and  to select "MySelection" "Charge detail" "Yes."

2



Turn  to select "Top menu," and press  (ok).

 


The EZ トップメニュー display appears.




3

Turn  to select "料金・申込・インフォ" and press  (Select).




The 料金・申込・インフォ display appears.

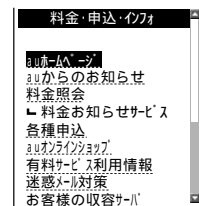


You can confirm the list of registered paid sites and change your EZ password or premium EZ password in "有料サービス利用情報."

4

 Turn  to select "料金照会" and press  (Select).



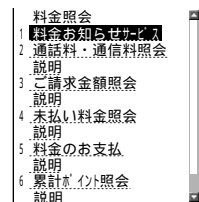The 料金照会 display appears so that you can select the item you want to confirm.




Downloading an incoming melody

Example: To download an incoming melody and specify it as an incoming ring

1

 Press **E** (EZ) in the idle display.




The EZmenu appears.




2

 Turn to select "Top menu," and press (ok).




The EZ トップメニュー display appears.

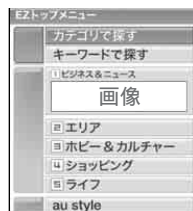


3

 Turn to select "カテゴリで探す," and press (Select).




The カテゴリで探す display appears.

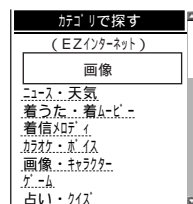


4

 Turn to select "着信メロディ," and press (Select).




The 着信メロディ display appears.

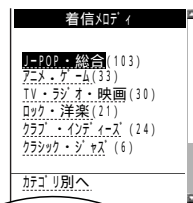


(sample display)

 
- 5** Turn  to select the desired site, and press  (Select).



Follow the on-screen instructions to select the melody you want to download.



 -  When the additional information cost is charged to use the site, you must input your EZ password. If you are using such services for the first time, set your EZ password.



- 6** Select a melody to download.



Download the melody by following the on-screen instructions.


Downloaded

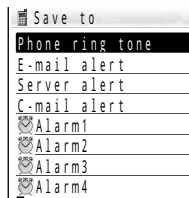 - 7** When downloading finishes, press  (play) to play back the incoming melody, and press  (save) while the incoming melody is playing.



The Save to display appears.

 - 8** Turn  to select "Phone ring tone," and press  (select).



The downloaded incoming melody is specified as an incoming ring.

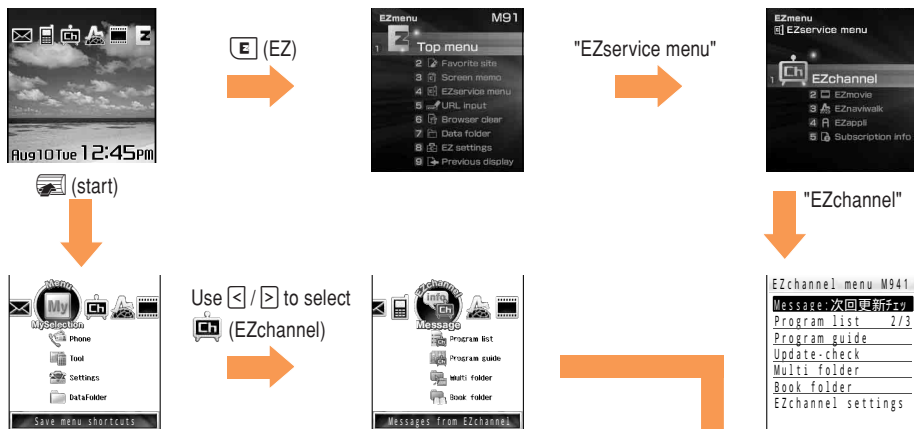 
How to use EZchannel

EZweb subscription required

What you can do with EZchannel

EZchannel is a program delivery service particular to broadband cellphone CDMA1X WIN that lets you have fun as though it were a TV program or magazine.

If you register a program you want to watch in advance, it is automatically downloaded during the period from late night to early morning (2:00 to 8:00 a.m.).




To check news from au: "Message"

Provides recommended information and the next update date/time.

To watch a downloaded program: "Program list"

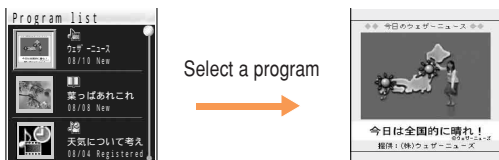Lists the registered programs; plays back a downloaded program.



Select a program



© ウェザーニュース

Message

Program list

Program guide

Update-check

Multi folder

Book folder

You cannot select "Update-check" from the Cross menu.

See

page 77

To search for your favorite programs: "Program guide"



Accesses a program guide site and registers your favorite programs
If necessary, you can cancel a registered program.

To check whether the program has been downloaded: "Update-check"

You can check the update or download program data that you cannot receive during automatic downloading.

See

page 80

Move your favorite programs to "Multi folder" or "Book folder."

When a new program or e-book is downloaded, the old one is automatically deleted. You should move the programs you do not want to delete to "Multi folder" ("Book folder" for e-books).

In some cases, you may not be able to move a program because of copyright protection.

Move a program



(option)

detail info
site link
move to phone
move to M.S.
delete data
cancel
back

"move to phone"

Multi folder/
Book folder

Play a program saved in "Multi folder"



Select a program



© ウェザーニュース

Enjoying EZchannel

EZchannel downloads a large amount of data in which one program reaches approximately 3M maximum bytes. To use EZchannel, it is recommended to participate in the flat-rate packet communication charge service "Double Flat Rate."

For details, contact an au Customer Service Center.

 
1 Press (EZ) in the idle display.

The EZmenu appears.





2 Turn to select "EZservice menu," and press (ok).

The EZservice menu appears.



3 Turn to select "EZchannel," and press (ok).

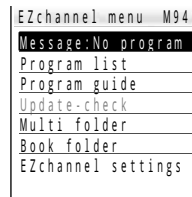 The EZchannel menu appears.



Register a program

Select a program from the program guide. You can register up to three programs. The registered program is automatically downloaded during the period from late night to early morning (2:00 to 8:00 a.m.) and saved in the program list.



Play back the program

You can watch a variety of multimedia content as though they were TV programs or magazines.



Save the program

You can save your favorite program data in the Multi folder, etc. Moving program data to such a folder prevents it from being overwritten when new data is delivered on a program update date.



If you change the cellphone model from one with EZchannel to the W21S, access "Program guide" and select "機種変更された方へ." You can continue using the programs you registered in the previous cellphone.

Registering a program

You can register up to three favorite programs from the Program guide.

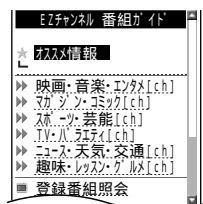
 
1

See steps 1 to 3 in "Enjoying EZchannel" (page 76) to display the EZchannel menu.

2

Turn  to select "Program guide," and press  (select).

The 番組ガイド display appears.



(sample display)

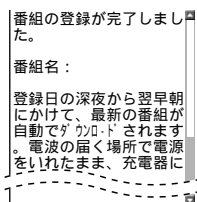
3

Select and register a program.

Follow the on-screen instructions to register the program.

The registered program is listed in the Program list display.

If a registered program is updated, new data is automatically downloaded.



To download an updated program, place the W21S in a service area, keeping the power on.




If the power is turned off in the Auto power off mode or EZweb block is set, the program may not automatically be updated, depending on your setting.



The premium EZ password is necessary to register a paid program.

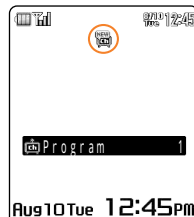


If you fail to automatically download a program, "Failed" appears in the idle display. If you press  (select) in this display, you can manually download the program.

Playing a program


When the program is updated

The message appears in the idle display,  appears.



1

 Press  (select).





The Program list display appears.




Viewing the display

Registered	Registration of a program is completed, and the W21S is waiting for the first delivery.
Updated	A program is updated and has already played back.
New	A program is updated but has not yet played back.






 



2

 Turn  to select a program you want to see, and press  (play).



The program is played back.

Operation during play-back

	Moves the cursor up/down and scrolls the screen.
 /  (at least one second)	Rewinds or cues.
	Fast-forwards.
 (volume)	Decreases the volume.
 (volume)	Increases the volume.
	Suspends play-back.
 (select/ok)	Selects a link.
Number keys	Selects a link number.
	Ends play-back and returns to the idle display.

May not be available depending on the program.





Some downloaded programs have a restricted play-back period, timeframe and count. These programs cannot be played back when such restrictions are met (The count starts just after the play-back).

Saving a program

 
The programs registered by EZchannel are overwritten each time it is updated. You should save the programs you do not want to delete in "Multi folder" or "Book folder" in the data folder; then you can watch them any time.



Example: To save programs in "Multi folder" of the data folder

- 1 See steps 1 to 3 in "Enjoying EZchannel" (page 76) to display the EZchannel menu.


- 2 Turn  to select "Program list," and press  (select).

The Program list display appears.



- 3 Turn  to select a program you want to save, and press  (option).

 
The Function menu appears.



4

Turn  to select "move to phone," and press  (select).

 The Select the items display appears.





Destinations to move

User folder	Move to a subfolder in "User folder."
Private folder	Input a lock code to move to "Private folder."
Multi folder	Move to "Multi folder."

 


When moving an e-book, "Book folder" appears instead of "Multi folder."

5

Turn  to select "Multi folder," and press  (select).

Programs are saved in "Multi folder" of the data folder.



In some cases, you may not be able to save a program because of copyright protection.



Programs cannot be saved if a restricted play-back period, timeframe or count is met.

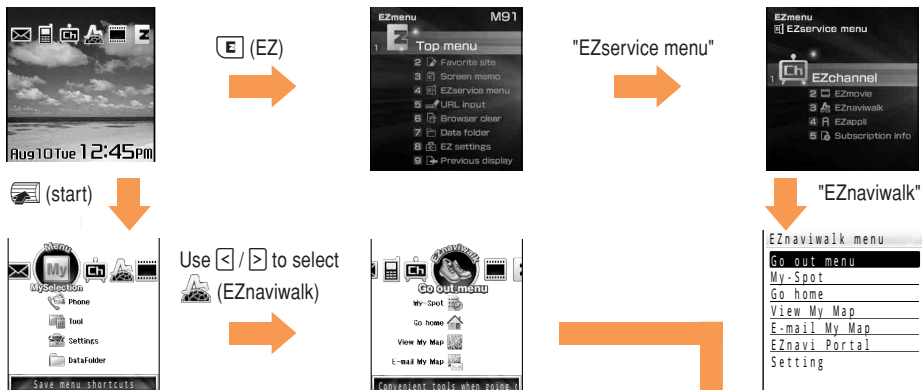 
How to use EZnaviwalk

EZweb subscription required

What you can do with EZnaviwalk

Cellphone with car navigation system attached!

EZnaviwalk is a full-scale navigation system for guiding pedestrians to a destination. This system has various easy-to-use features available when you go out or have lost your way. It contains an electronic compass, so you can display a map based on the direction you are facing. Let's try it now.



When you wonder where you are: "View My Map"

Use this feature if you wonder where you are in a place you have gone to for the first time or when you have lost your way. If you select only "View My Map," a map of your current position appears in real time.



The first checking result is displayed by symbol ★. After the map appears, the current position is displayed with in real time through continuous checking.

See
page 86

When you go home: "Go home"

If you register your home location in advance, you can easily navigate a route to your home from wherever you are. This function provides transfer information and expected arrival time for trains.

Search result



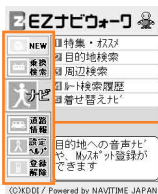
"ルート案内開始"



Go out menu
My-Spot
Go home
View My Map
E-mail My Map
EZnavi Portal

When you go out: "Go out menu"

You can display various menus convenient for going out.




NEW	New information and news are provided.
乗換検索	You can search the train transfer guide and train schedule.
ナビ	You can also use a voice navigation service to a destination or register "My-Spot." New function "着せ替えナビ" = You can change the voice or icon to your favorite celebrity or cartoon characters.
道路情報	You can search nationwide road information in real time.
設定ヘルプ	You can perform various settings and confirm FAQs.
登録解除	You can register/cancel memberships.

Register your favorite places in "My-Spot"

See
page 84

If you register frequently visited places, your home, and your favorite places (office, friends' homes, shops, etc.), this system lets you easily navigate to your destination from wherever you are.

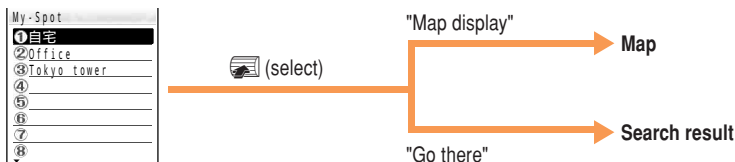
See page 84 for details on how to register favorite places in My-Spot.




To inform your partner where you are: "E-mail My Map"

You can inform your partner where you are by mail when you plan to meet him or her. The partner who received the mail can navigate his or her way to your location (only for models that support EZnaviwalk).

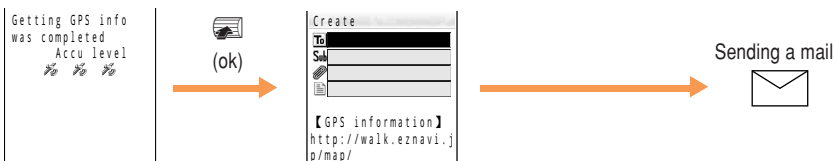Send



Receive

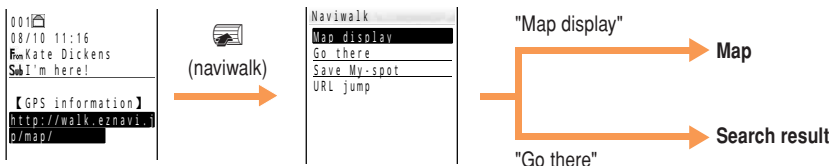


When checking the map, be sure to stop in a safe place.

 
Registering your home in "My-Spot"



If you register frequently visited places in My-Spot, you can easily display a route and map to the destination.

Example: To register your home (When you are at home)


- 1 Press  (EZ) in the idle display.



The EZmenu appears.




 
- 2 Turn  to select "EZservice menu," and press  (ok).


The EZservice menu appears.



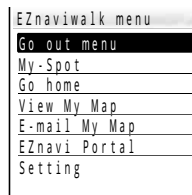 
- 3 Turn  to select "EZnaviwalk," and press  (ok).



The EZnaviwalk menu appears.




 - 4 Turn  to select "My-Spot," and press  (select).

The My-Spot display appears.



 


- 5** Turn  to select "自宅," and press  (save).



Get GPS info
Current pos
Data folder
Phone book
Profile
Modify with map


The display for selecting how to obtain GPS information appears.

 - 6** Turn  to select "Current pos," and press  (select).




Getting GPS info was completed
Accu level
  

 The "Checking current position" display appears, and you can obtain GPS information.





-  EZnaviwalk uses a GPS satellite network, so you may not obtain the correct GPS information indoors. In that case, move to a place where you can see the sky.

- 7** Press  (save).



My Spot
1 自宅
2
3
4
5
6
7
8



The current position is registered as your home.

 
-  Press  (select), then use  and  to select "Map display" "Yes"; the map will appear.

Checking how to go home

You can search a route from your current position to the destination, combining train and walking routes. To search a route to your home, register your home in advance. See page 84 for details on how to register your home.

1 See steps 1 to 3 in "Registering your home in "My-Spot"" (page 84) to display the EZnaviwalk menu.

2 Turn  to select "Go home," and press  (select).






The GPS information confirmation screen appears.

GPS情報を通知します。よろしいですか？

はい
いいえ

本確認画面が不要な場合は電話機本体のGPS情報通知設定をON(確認画面なし)にしてください。

 3 Turn  to select "はい," and press .



The "Checking current position" display appears, and also the search result screen appears.

<経路候補一覧>

2004年08月10日

1 21:50 22:10 着 あり

2 21:49 22:14 着 あり

3 21:52 22:20 着 あり

4 21:48 22:20 着 あり

5 再探索

△MyE 設定



※おでかけメニュー

 
■第1経路

160分20分




入徒歩ルート案内開始

入徒歩ルート案内確認

4 Turn  to select "ルート案内開始," and press .



A map of your current position appears; the map automatically scrolls as you move.

  indicates a departure place;  indicates a destination (your home).

Operation during navigation

 / : Zooms in/out on the map

 /  /  / : Scrolls the map up, down, left, and right

 / : Turns the map left/right



Navigation engine by
NAVITIME JAPAN/
地図 © 昭文社



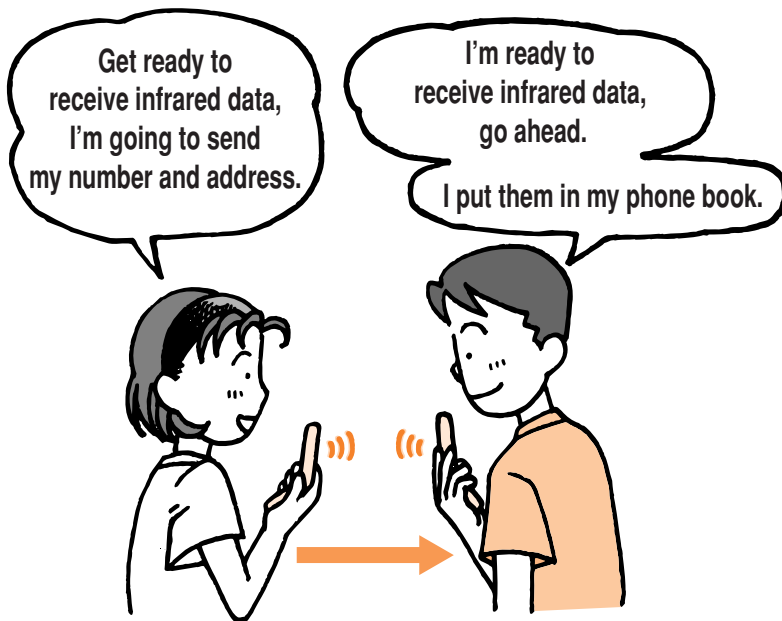 
How to use the infrared data exchange feature

You can use the infrared data exchange feature to send and receive phone book entries, profile data, and data in the data folder between au cellphones with the infrared data exchange feature. You can also send data in the "Memory Stick Duo" (commercial item).

Using the infrared data exchange feature

To send data with the infrared data exchange feature, both the person sending and the person receiving the data need to make preparations.

(We recommend that the person receiving data get ready before the sender sends the data.)



Sender
(support models: W21S, A1402S)

For details on the sending procedure,
see page 89.

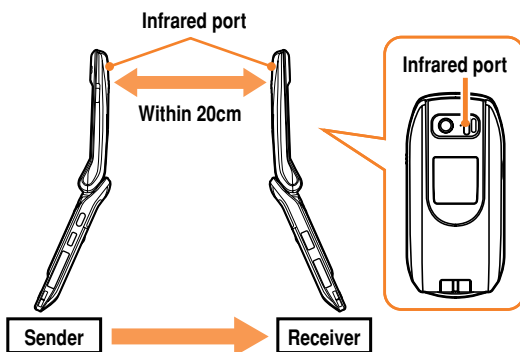
Receiver
(support models: W21S, A1402S)

For details on the receiving procedure,
see page 90.

Using the infrared data exchange feature (continued)




Procedure

Use your W21S within 20 cm of the other device. Also, keep your W21S pointed at the infrared port of the other device and do not move your W21S until data has finished being sent or received.



Data that can be sent and received

- Phone book entries
- Profile data
- Schedules
- Task lists
- Data in data folders (Photo, Movie, etc.)
- Data in DigiCame folder and data folder of "Memory Stick Duo" (sending only)

-  In some cases, you may not send or receive data because of copyright protection.
-  You cannot send or receive some data from some devices even if the other device you are communicating with is equipped with the infrared data exchange feature.
-  The infrared data exchange feature of the W21S sometimes does not transmit properly if the W21S is used in direct sunlight, under fluorescent lighting or near other equipment that emits infrared rays.

Using the infrared data exchange feature to send data

You can send phone book entries, profile data, and data in the data folder to an au cellphone with the infrared data exchange feature.

Example: To send profile data

 
- 1 Press  (start) in the idle display, and press .



The profile display appears.




- 2 Press  (option).


The Function menu appears.




- 3 Turn  to select "send Ir data," and press  (select).

 Data is sent through the infrared data exchange feature.



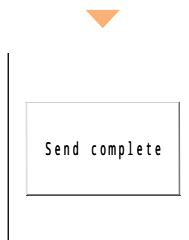-  When sending finishes, the display on the right appears.



 You may be required to input your authentication password.

 
Using the infrared data exchange feature to receive data

Follow the steps below before receiving data.

1

Press  (start) in the idle display.


The Cross menu appears.





2

 Turn  to select  (Tool), and press  (select).

The Tool menu appears.



 
3

Turn  to select "Rcv Ir data," and press  (select).

Data is received through the infrared data exchange feature.



When receiving finishes, a message is displayed and the data is saved.



You may be required to input your authentication password.

Inputting text


Changing the input mode

Input text by changing the input modes below.


Input mode	Press E (mode)	Press ☺ (smb)
	漢 : Kanji/Hiragana	☺ : E moji
	カ / か : Kana (double/single byte)	記 : Symbols (double byte)
	A / a : English (double/single byte)	コ / こ : Symbols (single byte)
	1 / 12 : Number (double/single byte)	


 For details on how to enter E moji/Symbols, see page 94.

 1 Press **E** (mode) in the text input display.



Each time you press **E** (mode), the input mode changes to Kanji/Hiragana Kana English Number Kanji/Hiragana...

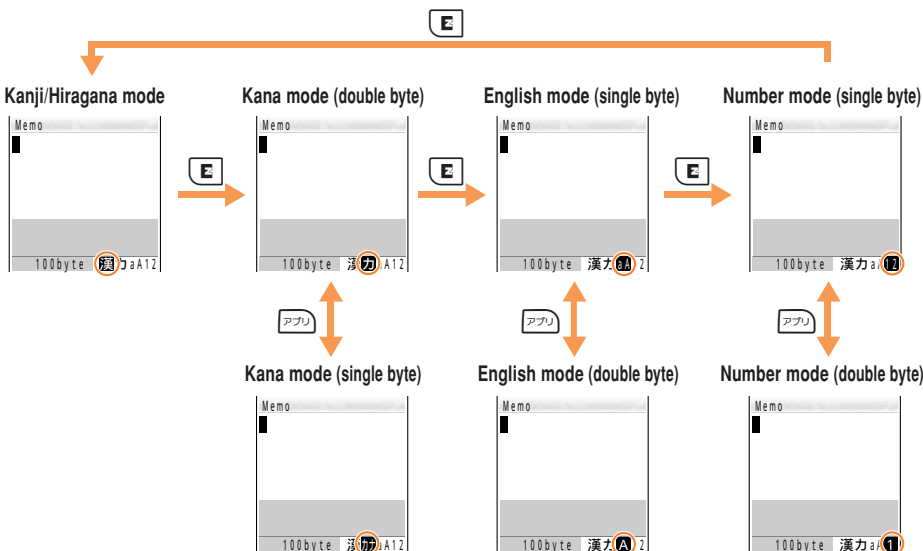  If you press **アプリ** (A/A) in the Kana, English, or Number mode, the double/single byte mode changes.










 The input mode that you can select is different depending on the current input display.

Inputting text



 
 
 

 
 
 
 

To input alphanumerics

Change the input mode to the English mode (page 91).


In the text input display, you can input text by pressing the keys indicated in the following table.

Example :  a  b  c  A  B  C  2

Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key												
	1	2	3	4	5	6	7	8	9	10	11	12	13
	.	@	/	:	-	_		1					
	a	b	c	A	B	C	2						
	d	e	f	D	E	F	3						
	g	h	i	G	H	I	4						
	j	k	l	J	K	L	5						
	m	n	o	M	N	O	6						
	p	q	r	s	P	Q	R	S	7				
	t	u	v	T	U	V	8						
	w	x	y	z	W	X	Y	Z	9				
	Space	!	?	-	,	'	;	()	"	&	¥	0
	!	?	-	,	'	;	()	"	&	¥		

 is also used to switch between uppercase and lowercase.

 You can input your e-mail address using up to 20 single byte alphanumerics in lowercase including "-" (hyphen) and "." (period). Note, however, that "." cannot be used in a row, or at the beginning or end of your e-mail address. Also, your e-mail address cannot be prefixed by "0."

Characters and symbols shaded in the table are not allowed before @ of
 " @ezweb.ne.jp."

Example: To input "tomy1" in the mail address



Input the section preceding @.

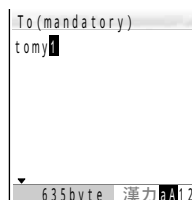
t : Press **[8]** once.

o : Press **[6]** three times and press **[>]** once.

m : Press **[6]** once.

y : Press **[9]** three times.

1 : Press **[1]** eight times.




For details on how to input "@ezweb.ne.jp," see page 95.

To consecutively input characters assigned to the same key


Input the first character, then press **[>]** and press the next character key.

Example: To input "ab"

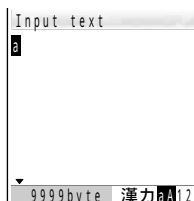
Press **[2]** once.



Press **[>]**.

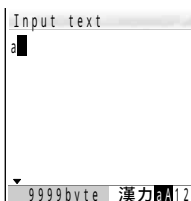

Press **[2]** twice.

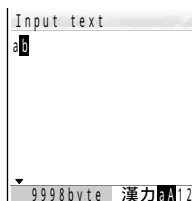

To input uppercase characters

Example: **[2]** **[*]** **[*]**

a A a

To delete characters

Example: Press **[クリア]** once.

abcde → abcd

Hold down **[クリア]** for at least one second.

abcde →


(All characters are deleted.)

Inputting text (continued)

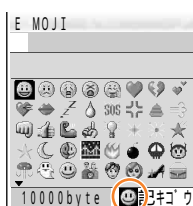
To input icons and symbols

- 1 Press  (😊/smb) in the text input display.

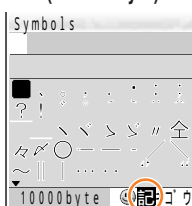


Each time you press  (😊/smb), the input mode changes to E moji
Symbols (double byte) Symbols (single byte) E moji...

E moji mode








Symbols mode
(double byte)




Symbols mode
(single byte)



 - 2 Press  /  and  to select the icon you want to use, and press  (select).



The selected icon is inputted.

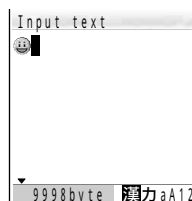

-  The input mode that you can select is different depending on the current input display.

To input phrases

You can call and enter phrases and face marks you use frequently.

Example: To input "@ezweb.ne.jp" in the mail address

- 1 Press  (option) in the text input display.

 
The Function menu appears.





```
copy
cut
paste
select paste
application
input
sel conversion
save predict
```

- 2 Turn  to select "input," and press  (select).


The input item selection display appears.





```
sign(E-mail)
beginning
sign(C-mail)
phrase
```

 - 3 Turn  to select "phrase," and press  (select).


The Category display appears.





```
Category
0 Profile
1 Internet
2 KAO MOJI1
3 KAO MOJI2
4 KAO MOJI3
5 Greetings
6 Business
7 Private
```

 - 4 Turn  to select "1 Internet," and press  (select).


The phrases selection display appears.



```
Select
0 @ezweb.ne.jp
1 dion.ne.jp
2 http://www.
3 .co.jp
4 .ne.jp
5 .ac.jp
6 .or.jp
7 .com
```

 - 5 Turn  to select "0 @ezweb.ne.jp," and press  (select).










The selected phrase is inputted.



```
To(mandatory)
@ezweb.ne.jp
```

628byte 漢力 12


Troubleshooting

Symptom	Items to check	Solution	Page
Power does not turn on.	● Is the battery pack properly attached?	Properly attach the battery pack.	-
	● Is the battery pack charged?	Charge the battery pack.	10
	● Did you hold down  for at least one second?	Hold down  for at least one second.	11
Cannot make calls.	● Is "圏外" displayed on the display?	Make a call from a place where "圏外" is not displayed.	11
	● Did you input the area code before inputting the phone number?	When making a call to a phone other than a cellphone, first input the area code even if you are inside the same city.	19
	● Is the power on?	Hold down  for at least one second.	11
	● Did you press  ?	Press  .	19
Cannot receive calls.	● Is "圏外" displayed on the display?	Move to a place where "圏外" is not displayed.	11
	● Is the power on?	Hold down  for at least one second.	11
No reaction when a key is pressed.	● Is the power on?	Hold down  for at least one second.	11
Warning tone sounds, and power turns off.	● There is not enough power left in the battery pack.	Charge the battery pack.	10
Incoming calls are automatically answered.	● Is record message set?	Hold down  for at least one second to cancel record message.	27
You cannot hear the other party.	● Is the volume during a call set low?	Turn  up while you are talking. The volume during a call increases.	23
You have incoming spam.	● Is the mail filter function in use?	Use the mail filter function.	48
You are connected to a charged service when you call back to a received call.	● Have you called an unfamiliar phone number?	Be careful when you call back to a number you do not recognize.	23

Other features


How to use the "Memory Stick Duo" (commercial item)

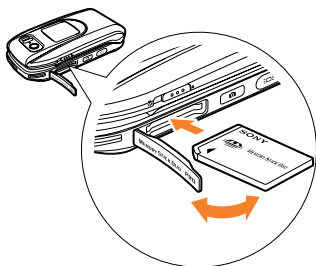 To insert the "Memory Stick Duo"



- ① Open the slot cover.
- ② Insert the "Memory Stick Duo" into the slot.
- ③ Close the slot cover.

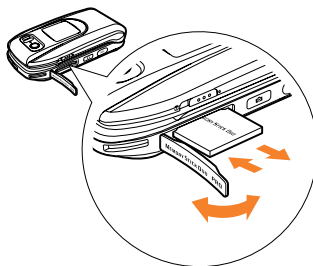To remove the "Memory Stick Duo"



- ① Open the slot cover.
- ② Gently press down the "Memory Stick Duo."
(Be careful since the "Memory Stick Duo" may pop up.)
- ③ Remove the "Memory Stick Duo."
- ④ Close the slot cover.

Others

The W21S has other handy features in addition to those introduced in this Basic Manual.

Menu design settings

You can select a pattern for the menu display. You can also set the pattern data you downloaded.

Idle display settings (Main display, Quick display)

You can set a photo taken by the W21S or other image as the idle display. You can also select your favorite image for the idle display of the quick display.

Incoming indicator settings

You can make and set the color and flashing pattern of an incoming indicator when you have an incoming call or mail.

EZ Chaku-Uta (TM)

This service allows you to set an artist's song as an incoming ring.
W21S supports EZ Chaku-Uta (TM) in the stereo mode.

PhotoMixer

You can create your own original works by adding images or text to pre-set, melody-attached animation templates.

EZ application (BREW™)

You can download game software from EZweb sites and play games.

"Memory Stick Duo" (commercial item) service

You can save photos and movies you took with the camera, back up personal data such as a phone book, and save e-mails you received.

TV remote controller

You can use the W21S as the remote control for a TV set, etc.

2D CODE READER

You can read barcodes (JAN codes) and QR codes using the camera.

EZ movie

You can download and play back movies of various genres from EZweb sites.

Index

A

accessories 8

B

battery pack 8, 9, 10

battery power, remaining 4, 11

before use 8

C

call 19

if you could not answer 20

making 19

notify/not notify the other party 19

receiving 20

camera 54

how to hold 55

movie 58

photo 56

cellphone etiquette 1

center jog 9, 12

charge indicator 9, 10

charging the battery pack 10

C-mail 49

creating and sending 50

icon 53

opening 52

receiving 52

confirming your call costs 71

confirming your cellphone number 18

Cross menu 14

D

desktop holder 8, 10

Dialed display 21

domain 36

downloading incoming melody 72

E

e-mail 35

attaching photo or movie 64

creating and sending 39

icons 39, 42, 44

initial settings 17

opening 42

receiving 42

replying 45

viewing attached photo or movie 47

e-mail address

changing 36

confirming 18

EZchannel 74

playing a program 78

registering a program 77

saving a program 80

EZnaviwalk 82

Go home 86

My-Spot 84

EZ Top menu 67, 68

EZweb 66

charged service usage information 71

confirming your call costs 71

EZ password 71

Favorite site 70

information sites 67

initial settings 17

F

Favorite site

saving 69

viewing 70

I

icons 16

ID Unset 20

idle display 11, 16

incoming indicator 9

incoming ring

tone 24

volume 24

infrared data exchange feature 87

receiving 90

sending 89

initial settings 17

inputting text	91
alphanumerics	92
changing input mode	91
character key assignment table	92
characters assigned to the same key ...	93
deleting characters	93
icons	94
phrases	95
symbols	94
uppercase	93

Internet (See "EZweb")

K

key operation	12
----------------------------	----

M

mail	
C-mail	49
e-mail	35
mail filter	48
manner mode	3, 26
"Memory Stick Duo"	97
icon	16
movie	
attaching to e-mail	64
recording	58
saving	59
viewing	62

N

names of parts	9
-----------------------------	---

O

one-ring call	5, 23
icon	23

P

phone book	29
editing saved data	32
making a call from	31
saving new data	29
saving received call	34

photo

attaching to e-mail	64
saving	57
taking	56
viewing	60

Photo mail 65

playing back

movie	62
photo	60
record message	27

power 4, 11

Q

quick display	9, 16
----------------------------	-------

R

Received display	22
icons	22
reception	4, 11
record message	3, 27
playing back	28
redialing	
number you called	21
number you received	22

S

sites	67
soft key	12
spam	5, 48

T

troubleshooting	96
------------------------------	----

V

volume during a call	23
-----------------------------------	----

Y

your e-mail address

changing	36
confirming	18

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:



0077-7-111

(toll free)

From au cellphones:

157 area code not required

(toll free)

Pressing "zero" will connect you
to an operator, after calling "157"
on your au cellphone.



古紙配合率100%再生紙を使用しています



モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales : KDDI Corporation
Okinawa Cellular Telephone
Company

Manufacturer : Sony Ericsson Mobile
Communications
Japan, Inc.

A-C14-100-11 (1)
July 2004, 1st Edition